



P91.12-3187-09

- 1 Rear seat cushion
- 2 Right rear backrest
- 3 Left rear backrest
- 4 Upholstery strip

- 5 Seat belt buckle
- 6 Screw
- 8 Belt end fitting

- S68/5x1 Left rear seat belt buckle switch electrical connector



P91.12-3047-09

Illustrated on model 204.0

- 2 Right rear backrest
- 3 Left rear backrest
- 9 Screw

- 10 Center pivot bearing
- 11 Bearing bracket
- 12 Bolts
- 13 Electrical connector (model 204.0, 212)

- S54/5 Left rear backrest inclination switch (model 204.0, 212)
- S54/6 Right rear backrest inclination switch (model 204.0, 212)

Modification notes

5.6.09	Value changed: Screw/bolt at rear seat belt buckle	*BA91.40-P-1015-01Q
--------	--	---------------------

	Remove/install		
1	Remove left or right side bolster	Model 204.0, 212 Model 204.2/9	AR91.12-P-1710CW AR91.12-P-1710CX
2	Lift upholstery strip (4), unclip wire hoop from bracket (arrows A) and remove upholstery strip (4)		
3	Unscrew screw (6) and remove seat belt buckle (5) from belt end fitting (8)	When removing the left rear backrest (3). Do not disconnect left rear seat belt buckle switch electrical connector (S68/5x1). Model 204 Model 212	*BA91.40-P-1007-01P *BA91.40-P-1015-01Q
4	Unscrew bolt (9) from center pivot bearing (10)		
5	Swivel bearing bracket (11) approx. 180° upwards		
6	Unlock left rear backrest (3) or right rear backrest (2) and fold forward		
7	Remove screws/bolts (12) at outer pivot bearing		*BA91.12-P-1006-03I
8	Expose and disconnect seat heater electrical connector in area of outer pivot bearing	Model 212 with code (872) Electric seat heater for left and right rear seat	
9	Expose and disconnect head restraint gravity lowering electrical connector in area of outer pivot bearing	Model 212	
10	Lift left rear backrest (3) or right rear backrest (2) and disconnect electrical connector (13) at left rear backrest inclination switch (S54/5) or right rear backrest inclination switch (S54/6)	Model 204.0, 212	
11	Pull outer seat belt to one side and remove left rear backrest (3) or right rear backrest (2) from the vehicle	Remove left rear backrest (3) or right rear backrest (2) out of the vehicle carefully, otherwise the rear door and the entrance area could be damaged.	
12	Install in the reverse order		

Rear seats

Number	Designation		Model 204	Model 212
BA91.12-P-1006-03I	Bolt, outer pivot bearing to body	Nm	40	40

Seat belts/emergency tensioning retractors

Number	Designation		Type 204.0	Model 204.2	Model 204.9
BA91.40-P-1007-01P	Screw on rear belt buckle	Nm	32	32	32

Seat belts/emergency tensioning retractors

Number	Designation		Model 212.0
BA91.40-P-1015-01Q	Screw on rear belt buckle	Nm	40