

Shown on left cylinder head

R4 Spark plugs



P15.10-2202-11

☒ ☒	Remove/install		
⚠ Danger!	Risk of death caused by contact with parts conducting high voltages.	Do not touch parts which conduct high voltages. Persons who wear electronic implants (e.g. heart pacemakers) should never perform any work on the ignition system	AS15.10-Z-0001-01A
⚠ Danger!	Risk of injury to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
🕒	Notes on avoiding damage to ignition system		AH15.10-P-0002-01D
1	Remove air filter housing		AR09.10-P-1150CMG
2	Remove ignition coils		AR15.12-P-2003CMG
3	Remove spark plugs (R4) from the cylinder heads	Nm Spark plug socket wrench gotis://A_02_01_0	*BA15.10-P-1001-01H
4	Install in the reverse order		
👁	Checking		
⚠ Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the engine as it is running	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
5	Carry out engine test run		

Nm Spark plugs

Number	Designation		Engine 156, 159
BA15.10-P-1001-01H	Spark plug on cylinder head	Nm	22