



P09.10-2211-08

**Shown on model 204**

- 2 Front engine cover  
3 Engine suction fan ducts  
4 Covers

- 5 Pressure reservoir  
5a Pneumatic line  
6 Air cleaner housing  
6h Brackets  
7 Intake port

- 7d Gasket  
7k Retaining clamp  
B2/6 Left hot film MAF sensor  
B2/7 Right hot film MAF sensor

	Remove/install		
<b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
<b>Danger!</b>	<b>Risk of injury</b> to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1	Open engine hood		
2	Remove engine air intake ducts (3) and front engine cover (2)	In order to prevent damage, lift the front engine cover (2) straight up without tilting it and place it down on a padded base.	
3	Remove covers (4)		
4	Release and disconnect electrical connectors at left and right hot film mass air flow sensors (B2/6, B2/7)		
5	Detach pneumatic line (5a) from pressure reservoir (5)		
6	Loosen both air filter housings (6) of intake manifold and cylinder head covers	<b>Installation:</b> Apply lubricating paste to brackets (6h) and seal (7d). <b>Installation:</b> Check correct interlocking of all brackets (6h) on intake manifold and cylinder head covers. Lubricant paste	*BR00.45-Z-1002-06A
7	Unlock retaining clips (7k) on intake port (7) with hook wrench and remove both air filter housings (6) with intake port (7)	In order to avoid damage, lay air filter housing (6) with intake port (7) on padded base. <b>Installation:</b> Check condition of seal (7d) on intake port (7) and check for correct seating; replace if necessary. Apply lubricating paste. Lubricant paste	*BR00.45-Z-1002-06A
8	Install in the reverse order		

**Repair materials**

Number	Designation	Order number
BR00.45-Z-1002-06A	Lubricating paste, rubber parts 2.5 kg, DB supply specification 6867.00	A 000 989 01 60