


Model 166, 172.4, 204, 205, 207, 212, 213, 218, 238, 253, 292

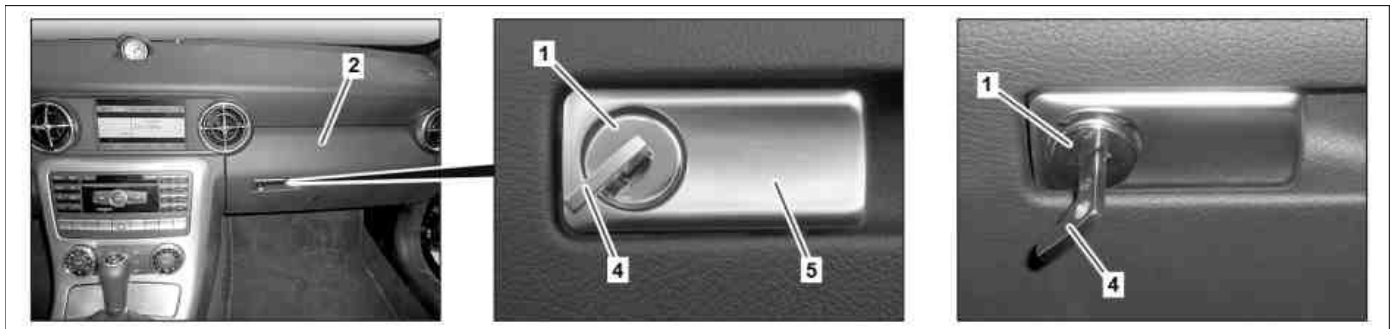

P68.10-4627-07

Shown on model 172.4

- 1 Lock cylinder
- 2 Glove compartment

- 4 Emergency key
- 5 Housing

Shown on model 172.4

- 3 Eccentric disk
- 5 Housing



P68.10-4628-11

☒	Remove		
1	Insert emergency key (4) into lock cylinder (1) and turn approx. 45° as shown		
2	Pull lock cylinder (1) with emergency key (4) out of housing (5)	i Hold housing (5).	
◀	Check		
3	Check position of edge (arrow A) on eccentric disk (3) in housing (5)	i The edge (arrow A) of the eccentric disc (3) must be at approx. 45° as shown in the figure. i Model 166.### 2# , 172.4## 2# , 204.### 2# , 205.### 2# , 207.### 2# , 212.### 2# , 213.### 2# , 218.### 2# , 238.### 2# , 253.### 2# , 292.### 2# The positions of the edges (arrows A and B) are turned 180°.	
4	Correct position of eccentric disk (3) at edges (arrow B)	If required. ! Do not press to eccentric disk (3) in axial direction. Otherwise the eccentric disk (3) can be pressed off of the housing (5). i Turn eccentric disk (3) at edges (arrow B).	
☒	Install		

5	Insert lock cylinder (1) into housing (5) in 45° position using emergency key (4)	i Lock cylinder (1) should arrest noticeably.	
6	Pull emergency key (4) out of lock cylinder (1)		