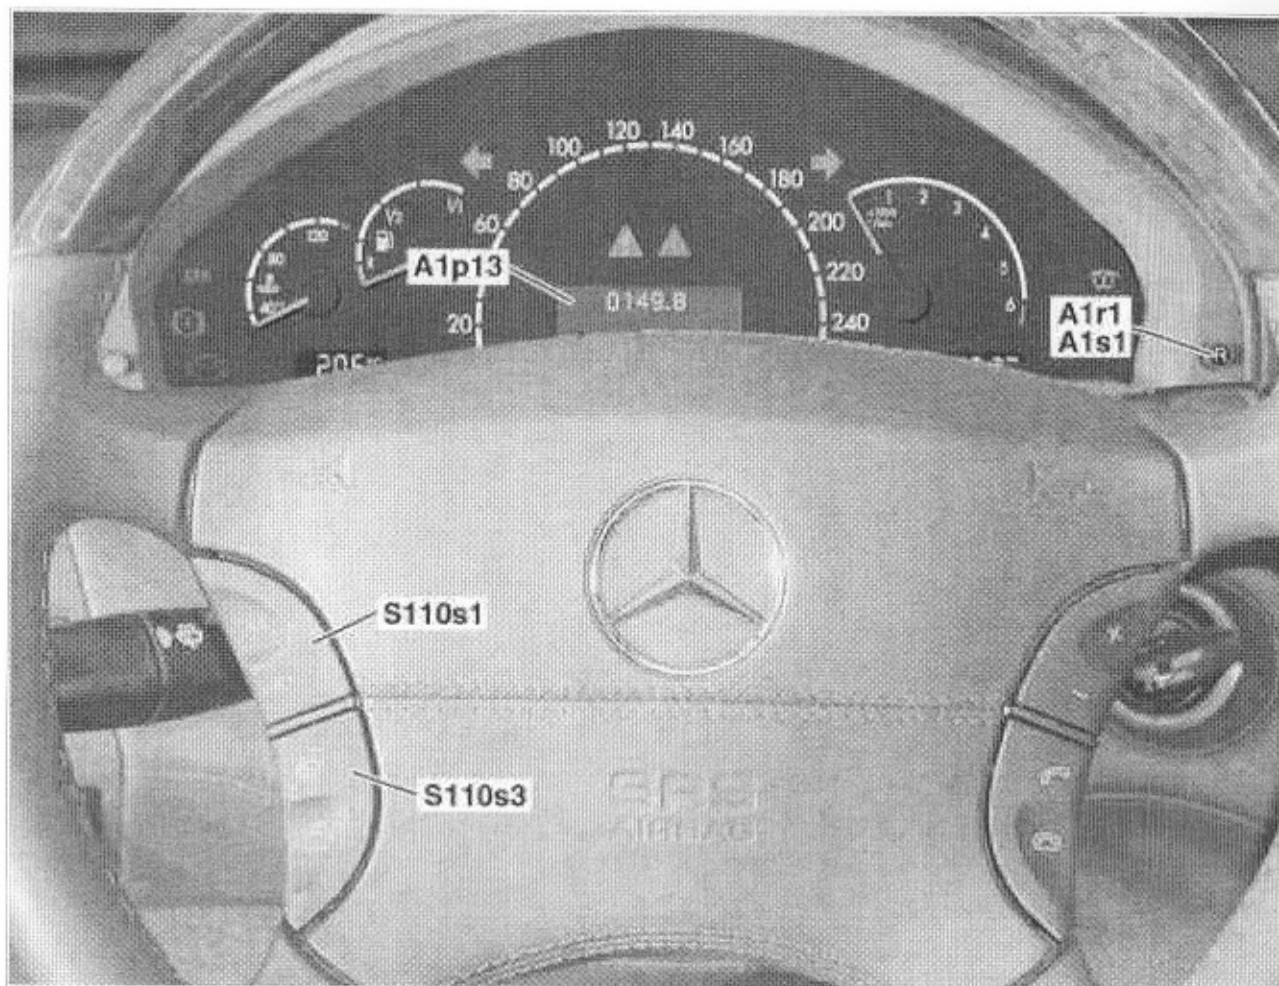


AP00.20-P-0042M**Reset service indicator****23.12.05****MODEL** 215.373 /374 /375 /376 /378 /379**MODEL** 220.025 /026 /028 /063 /065 /067 /070 /073 /074 /075 /083 /084 /087 /125 /126 /128 /163 /165 /167 /170 /173 /174 /175 /176 /178 /179 /183 /184 /187 /875 /878**MODEL** 230.456 /467 /471 /472 /474 /475 /476 /477 /479

Shown on model 220

A1p13 Multifunction display (model 215, 220)**A1p13** Left multifunction display (model 230)**A1r1** Instrument and search illumination rheostat (model 215)**A1r1** Instrument illumination rheostat and reset button (model 230)**A1s1** Reset button (model 220)**S110s1** Scroll forward/back button**S110s3** System selection button

P54.30-6878-06

| | | | |
|---|---|--|--|
| 1 | Switch on ignition | | |
| 2 | Press system selection button (S110s3) repeatedly until the total kilometer reading is shown in the multifunction display (A1p13) | | |
| 3 | Press the scroll forward/back button (S110s1) repeatedly until the service symbol is shown in the multifunction display (A1p13) | | |
| 4 | Keep the reset button (A1s1) or dimmer (A1r1) pressed for 3 seconds | <p>i In the multifunction display (A1p13) appears the inquiry "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM WITH R BUTTON".</p> <p>i R-BUTTON= Reset button (A1s1) or dimmer (A1r1).</p> | |
| 5 | Press the reset button (A1s1) or dimmer (A1r1) again | | |
| 6 | Switch off ignition | | |