


## MODEL 215

- 1 Front cover
- 2 Insert lugs
- 3 Knee guard
- 4 Screws
- 5 Hook
- 6 Heater housing
- 7 Instrumental panel

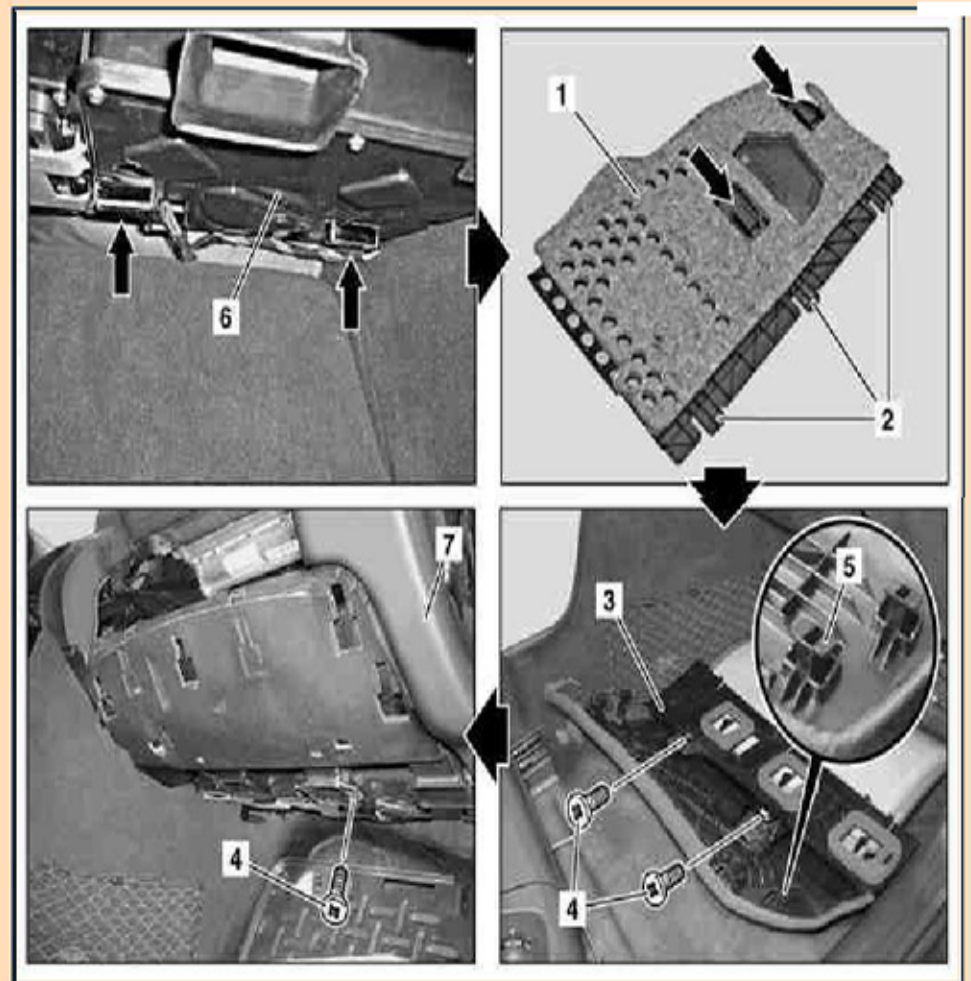


 

P68.10-2229-06

☒ ☒	Removal, installation		
1	Remove cover (1) with insert lugs (2) toward front out of knee guard (3) and toward rear out of both retainers (arrows) on heater housing (6)	<b>i</b> <b>Installation:</b> Insert both front insert lugs (arrows) for cover (1) into retainers (arrows) on heater housing (6)	
2	Unclip footwell lamp from knee guard (3) and disconnect connector		
3	Unscrew screws (4)		
4	Push knee guard (3) with hooks (5), (4 each) toward bottom out of instrument panel (7)		
5	Install in opposite order		

## MODEL 215, 220

- 1 Screw  
 2 Cover  
 3 Blower regulator connector  
 4 Screw  
 5 Screw  
 A32m1 Blower motor  
 A32n1 Blower regulator

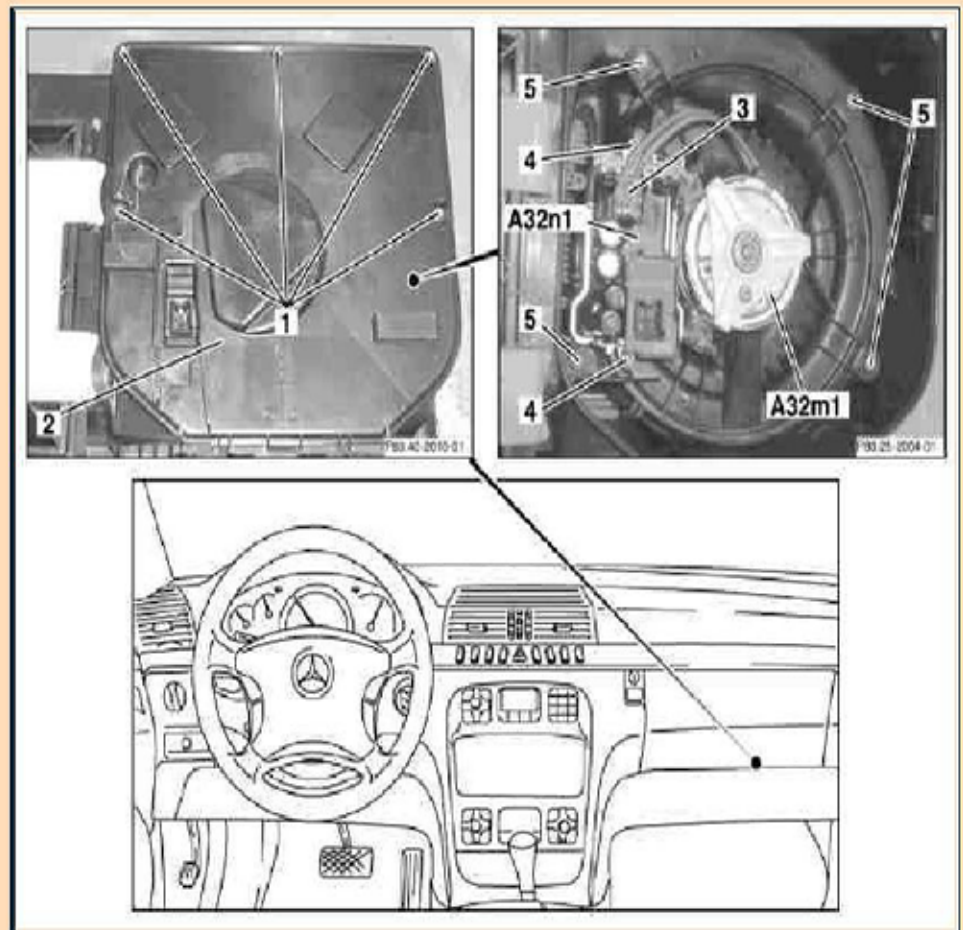

	Removal, installation		
1	Remove cover below instrument panel on right	Model 215	AR68.10-P-1520N
		Model 220	AR68.10-P-1520M
2	Disconnect blower connector		
3	Unscrew screws (1)		
4	Remove cover (2)		
5	Disconnect connector from blower regulator (3)		
6	Unscrew screws (4)		
7	Remove blower regulator (A32n1)		
8	Unscrew screws (5)		
9	Remove blower motor (A32m1)	 Do not lay blower motor (A32m1) down on impeller	
10	Install in opposite order		