

- ⓘ The vehicle must be horizontal for at least 5 minutes with the engine switched off at operating temperature. Otherwise measurement errors can occur.

- 1 Switch on ignition.

Shown on model 220

A1p13 Multifunction display (model 215, 220)

A1p13 Left multifunction display (model 230)

S110s1 Scroll forward/back button

S110s3 System selection button



P54.30-6879-06

- 2 Press the system selection button (S110s3) repeatedly until the kilometer reading is displayed in the multifunction display (A1p13).
- 3 Press the scroll back and forward button (S110s1) repeatedly until "CORRECT MEASUREMENT ONLY WHEN VEHICLE IS STATIONARY AND ON THE LEVEL" appears in the multifunction display (A1p13).
 ⓘ After ≈ 3 seconds "ENGINE OIL MEASUREMENT RUNNING" is displayed.
- 4 Refill the engine with the engine oil quantity shown in the multifunction display (A1p13) and check the engine oil quantity again.
- 5 Switch off ignition.