



Shown on model 215

M51 Hydraulic pump

P80.20-2286-01



Shown on model 220

M51 Hydraulic pump

P80.20-2285-01

☒ ☒	Removing, installing		
1	Withdraw ignition key		
2	Remove paneling in trunk	i Right side only	AR68.30-P-4600M
3	Remove battery	i Only model 215	AR54.10-P-0005I
4.1	Remove cover in battery frame	i Only model 215	
4.2	Remove hydraulic pump protective cap	i Only model 220	
5	Unclip hydraulic cylinder		
6	Disconnect electric connector on hydraulic pump (M51)		
7	Remove hydraulic pump (M51) from protective cap	i Installation: Replace cable strap	
8	Install in the reverse order		