



Assignment of fuse and relay box in engine compartment, left

- 1-27 Fuses
 K40/6 Left front fuse and relay module
 A-J Relay
 X Direction of travel

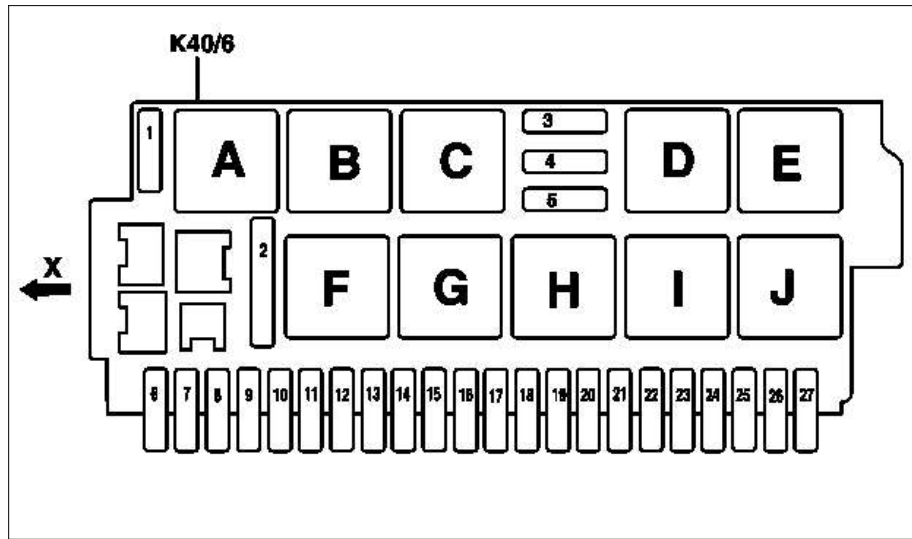

P54.15-2031-05

Fuse	Terminal	Color of fused wire	Fused function	Rating in amperes (A)
F1	87	-	Wiper park heater relay (K40/6kA)	40
F2	87	-	High pressure and return pump relay (K40/6kF)	50
F3	30	-	Steering wheel adjustment, horizontal: <ul style="list-style-type: none"> Steering column forward/back adjustment relay 1 (K40/6kD) Steering column forward/back adjustment relay 2 (K40/6kE) 	15
F4	30	-	Steering wheel adjustment, vertical: <ul style="list-style-type: none"> Steering column height adjustment relay 1 (K40/6kl) Steering column height adjustment relay 2 (K40/6kJ) 	15
F5	15R	-	Wiper On and Off relay (K40/6kH)	40
F6	-	-	-	-
F7	-	-	-	-
F8	-	-	-	-
F9	30	rd/wt 1.5 mm ²	Valid for air suspension: <ul style="list-style-type: none"> AIRmatic with ADS control module (N51) Valid for Active Body Control (ABC) (Code 487a): <ul style="list-style-type: none"> ABC control unit (N51/2), standard on model 215 	30
F10	15	bk/bl 0.75mm ²	Windshield washer fluid pump (M5/1)	15
F11	15R	bk/ye 0.5mm ²	Separation point for VICS voltage supply (X137/1), 	5
F12	15R	-	-	-
F13	30	rd/bk 4.0 mm ²	<ul style="list-style-type: none"> Left front door control unit (N69/1), model 220 Left door control unit (N69/1), model 215 	40
F14	15R	-	-	10
F15	30	-	-	30
F16	15R	bk/bl 0.5mm ²	Stop light switch (S9/1)	7.5
F17	15R	pk/gn 0.5mm ²	Vehicle-sensitive seatbelt lock sensor (A60), model 215	7.5
F18	15R	bk/ye 0.75mm ² bk/ye 0.5mm ²	Valid for telephone preinstallation network D-portable CTEL (code 273): <ul style="list-style-type: none"> Portable CTEL connector (X39/39) Valid for MB standard telephone (code 853): <ul style="list-style-type: none"> Cellular telephone transmitter and receiver unit, D2B (A35/13) Valid for TELE AID (code 855): <ul style="list-style-type: none"> Telephone and TELE AID transmitter and receiver unit, D2B (A35/17) 	5

			Valid for EMERGENCY CALL emergency call system (code 348a), USA only: <ul style="list-style-type: none"> ● via circuit 15R (Z3/12) connector sleeve <ul style="list-style-type: none"> - E-Call control unit (A35/8) - Telephone interface (A34/4) 	
F19	15	rd/ye 0.5mm ²	<ul style="list-style-type: none"> ● Left front reversible emergency tensioning retractor (A76) model 220 ● Right front reversible emergency tensioning retractor (A76/1) model 220 	5
F20	15	-	-	-
F21	15R	-	-	-
F22	30	rd/ye 2.5 mm ²	Valid for COMAND operating and display system (Code 352a): <ul style="list-style-type: none"> ● COMAND operating, display and control module (A40/3) 	15
F23	30	rd/ye 0.75mm ²	Valid for TV tuner (code 860) and COMAND operating and display system (code 352a): <ul style="list-style-type: none"> ● TV tuner (A2/42) Valid for COMAND operating and display system (code 352a) and Japanese version (code 498): <ul style="list-style-type: none"> ● Via terminal 30 connector sleeve (Z4/3): <ul style="list-style-type: none"> - Operating and display unit rear screen (A40/2) Valid for CD changer (code 819) and Japanese version (code 498): <ul style="list-style-type: none"> ● via circuit 30 connector sleeve (Z4/3) <ul style="list-style-type: none"> - CD player with changer (in luggage compartment) (A2/6) 	7.5
F24	30	rd/ye 2.5 mm ²	Audio gateway control module (N93/1)	20
F25	30	rd/ye 2.5 mm ²	Valid for sound system (code 810): <ul style="list-style-type: none"> ● Sound amplifier (A2/13), standard on model 215 	25
F26	-	-	-	-
F27	30	-	-	-