GF54.15-P-1257-02IR	Relay assignment of fuse and relay box in	<b>⊯</b> GF
	right engine compartment	

## Fuse and relay box in right of engine compartment


28-49 Fuses

K-P

K40/7 Right front fuse and relay

module relay

X Direction of travel

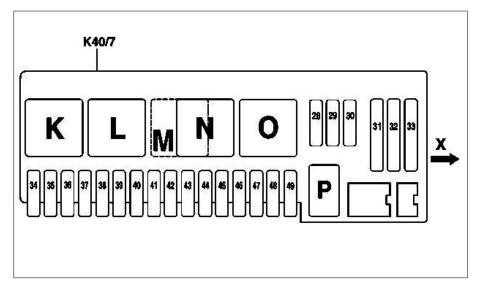

P54.15-2032-05

Bay	Designation	
K	Motor electronics/chassis relay (K40/7kK)	
L	Starter relay (K40/7kl)	
М	Only valid for diesel: CDI relay (K40/7kM)	
N	Air pump relay (K40/7kN)	
0	Air compressor relay (K40/7kO )	
Р	Fanfare horns relay (K40/7kP)	