


F32/4 Interior prefuse box  
 F32/4k2 Quiescent current cutout relay  
 X Direction of travel

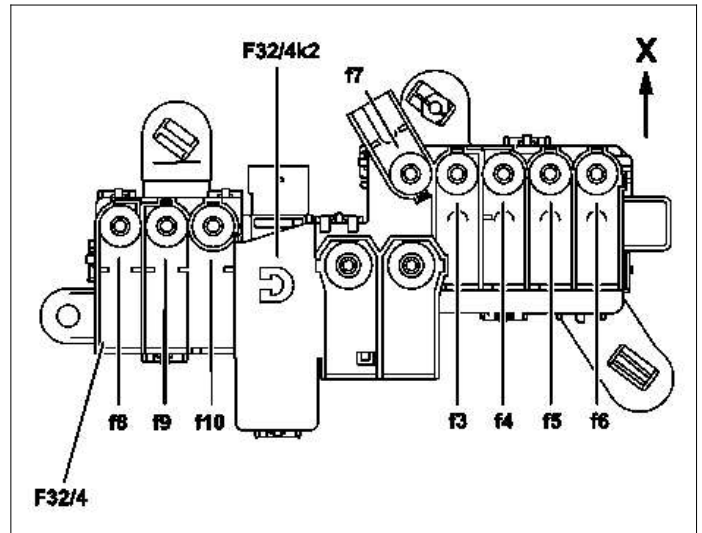

P54.15-3194-11

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f3	30	16.0 RD	<ul style="list-style-type: none"> <li>Rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	150
f4	30	16.0 RD	<p><b>Valid for code (B03) ECO start/stop function:</b></p> <ul style="list-style-type: none"> <li>ECO start/stop function relay (K98)</li> </ul> <p><b>Valid for model 221.095/195:</b></p> <ul style="list-style-type: none"> <li>DC/DC converter control unit (N83/1)</li> </ul> <p><b>Valid for code (Z17) Heated windshield</b></p> <ul style="list-style-type: none"> <li>Heated windshield control unit (N61)</li> </ul>	150
f5	30	6.0 RD 4.0 RD	<p><b>Valid for model 221 with code (965) Electrical preinstallation for rental vehicle:</b></p> <ul style="list-style-type: none"> <li>Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul> <p><b>Valid for model 221.095/195:</b></p> <p>Fused via vacuum pump (+) relay (K109) and vacuum pump (-) relay (K109/1):</p> <ul style="list-style-type: none"> <li>Vacuum pump (M56)</li> </ul>	125 40
f6	30	10.0 RD	<ul style="list-style-type: none"> <li>Right dashboard fuse box (F1/6)</li> </ul>	80
f7	30	16.0 RD	<p><b>Valid for model 221 with engine 629, 642, 651:</b></p> <ul style="list-style-type: none"> <li>PTC heater booster (R22/3)</li> </ul> <p><b>Valid for model 221 with code (965) Electrical preinstallation for rental vehicle:</b></p> <ul style="list-style-type: none"> <li>Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	150
f8	30g	10.0 RDWH	<ul style="list-style-type: none"> <li>Front SAM control unit with fuse and relay module (N10/1)</li> </ul>	80
f9	30g	10.0 RDWH	<ul style="list-style-type: none"> <li>Left dashboard fuse box (F1/7)</li> </ul>	80
f10	30g	16.0 RDWH	<ul style="list-style-type: none"> <li>Rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	150