



P27.10-0340-79

2a	Shift plate
11	Plug socket
Y3/6	Electric control unit
Y3/6b1	Transmission oil temperature sensor
Y3/6n2	RPM sensor 2
Y3/6n3	RPM sensor 3
Y3/6s1	Starter lockout contact

Y3/6y1	Modulating pressure control solenoid valve
Y3/6y2	Shift pressure control solenoid valve
Y3/6y3	1-2 and 4-5 shift solenoid valve
Y3/6y4	3-4 shift solenoid valve
Y3/6y5	2-3 shift solenoid valve
Y3/6y6	Torque converter lockup PWM solenoid valve