


7. Retighten Lock Knob by turning it all the way clockwise.

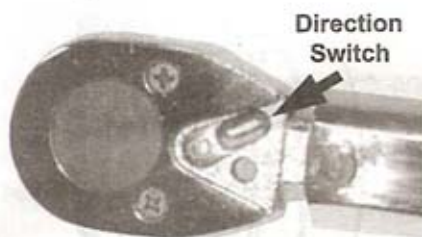

8. Set the Direction Switch for clockwise or counterclockwise operation. The Switch shown above is in position for clockwise operation.
9. Place socket onto the nut or bolt and pull handle gradually until a click is heard or felt. **Do not pull beyond that point;** the click indicates that the torque setting has been reached.
10. Stop pulling and the Torque Wrench will automatically reset.
11. When finished, set the Torque to the lowest torque setting (not lower than the lowest setting) before storing indoors out of reach of children.

handle (CW and CCW) several times to re-lubricate the internal workings. Then, operate at a low torque setting several times. This ensures proper operation. **Do not turn knurled handle below the lowest torque setting.**

3. Wipe Torque Wrench with a cloth to clean. Do not immerse in any cleaning solution. This would damage the internal lubrication.
4. The Torque Wrench was calibrated and tested to $\pm 4\%$. Periodically have the Wrench calibrated and serviced by a qualified technician.
5. Store inside case in a clean and dry location.

Note: Replacement parts are not available for this item.

CLEANING, MAINTENANCE, AND LUBRICATION

CAUTION TO PREVENT INJURY FROM

TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for loose hardware, misalignment or binding of moving parts, cracked or broken parts and any other condition that may affect its safe operation.
2. If the Torque Wrench has not been used for some time, turn the knurled