



MODEL 208

- 1 Instrument panel
 2 Housing
 3 and 5 Screws
 4 Covers
 12 Connector

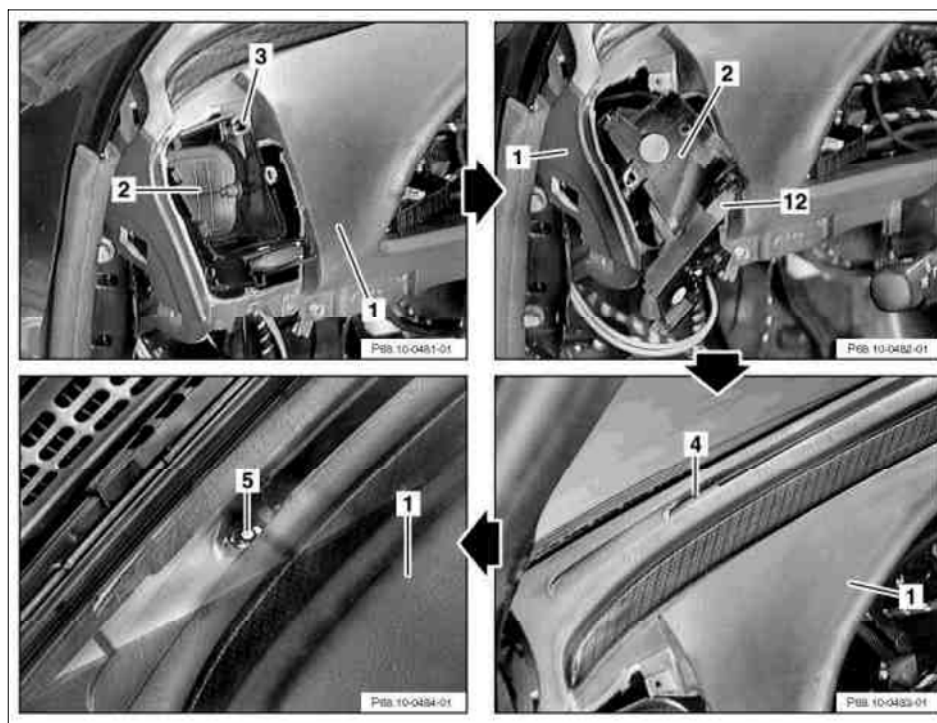

P68.10-0485-06

- 1 Instrument panel
 6,7,8 and 9 Screws
 10 Gasket
 11 Defroster nozzle

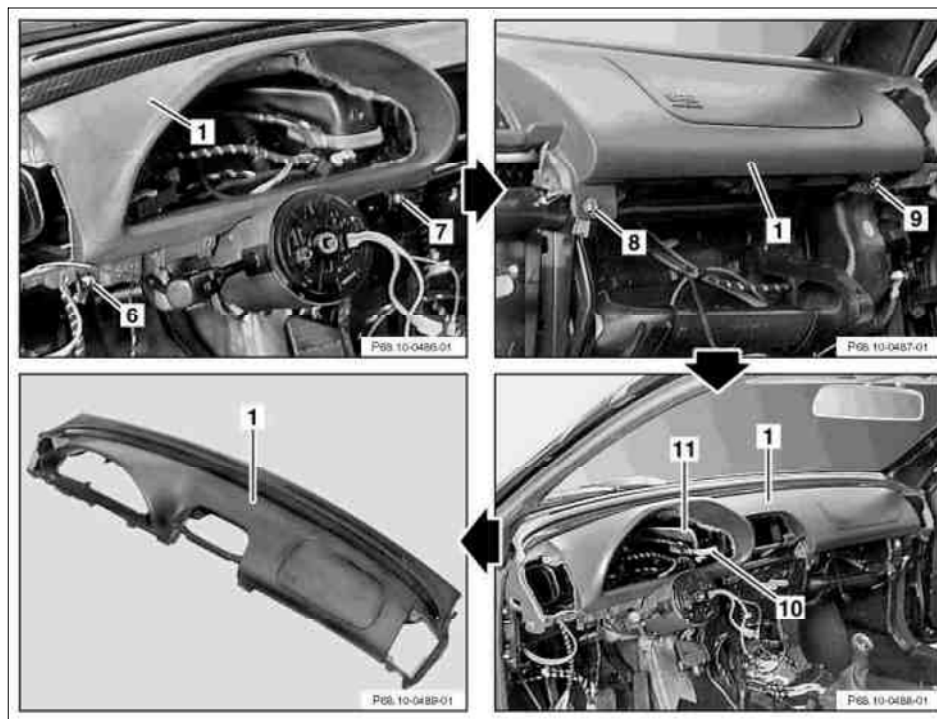

P68.10-0490-06

 	Removal, installation		
1	Remove steering wheel		AR46.10-P-0100C
2	Remove instrument cluster		AR54.30-P-6015EA
3	Remove bottom section of instrument panel on driver's side		AR68.10-P-1505K
4	Remove bottom section of instrument panel on passenger side		AR68.10-P-1507K
5	Remove center console		AR68.20-P-2000K
6	Remove side air nozzles on left and right		AR68.10-P-1100K

7	Remove center air nozzle		AR68.10-P-1150K
8	Remove panel ing on A-pillars on left and right		AR68.30-P-4050K
9	Unscrew screw (3) and remove housing (2)		
10	Disconnect connector (12) on housing (2) and lay housing down (2)		
11	Unclip cover (4) on left and right at top and remove		
12	Unscrew screws (5) on left and right		
13	Unscrew screws (6, 7, 8 and 9)		
14	Lift instrument panel (1), pull toward rear and remove	<p>i Installation: Insert sheet metal clip nuts (6 each) for fastening instrument panel. Check gasket (10) above air outlet on heater housing and replace, if necessary. Insert instrument panel (11) with defroster nozzles (11) on heater housing, expose electrical wires. Check for proper function, set clock and adjust side windows, code radio</p>	
15	Lay instrument panel (1) down on suitable surface		
16	Reinstall in opposite order		