



MODEL 208

- 1 Center console
 2 Cover (armrest)
 3, 4, 5 and 6 Screws
 7 Bottom section of instrument panel

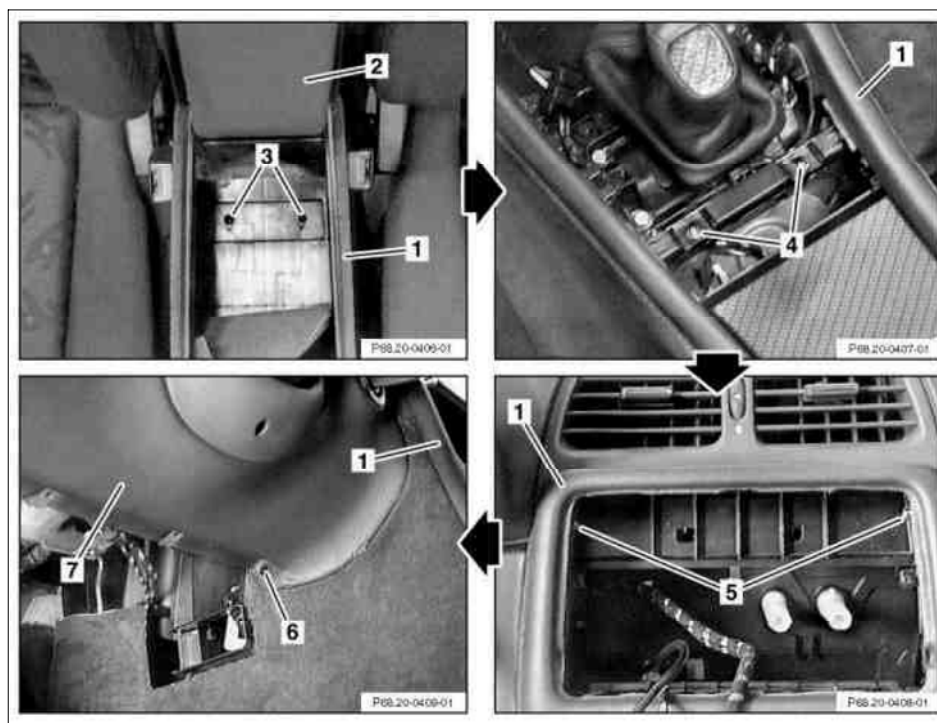

P68.20-0410-06

- 1 Center console
 7 Bottom section of instrument panel

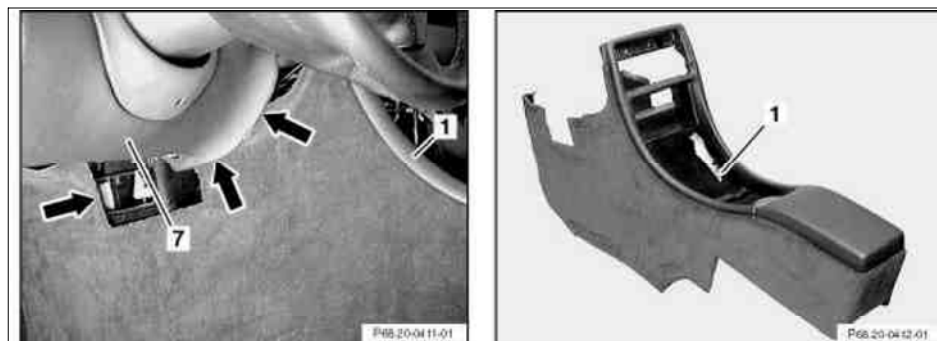

P68.20-0413-04

	Removal, installation		
1	Remove cover below instrument panel (left)		AR68.10-P-1500K
2	Remove cover below instrument panel (right)		AR68.10-P-1520K
3	Remove cover on air outlet in footwell on left and right		
4	Remove ashtray housing		AR68.20-P-2400K
5	Remove spectacles compartment or cassette compartment		AR68.20-P-2450K
6	Remove radio		AR82.60-P-7502EA
7	Remove pushbutton control module for heater/air-conditioning		
8	Open cover (2) above stowage compartment and remove insert		
9	Unscrew screws (3) in stowage compartment		
10	Unscrew screws (4) in area of shift lever dome		
11	Unscrew screws (5) below center nozzle		
12	Unscrew screws (6) in bottom section of instrument panel on left and right		
13	Lift floor covering in front in area of center console paneling		
14	Adjust both front seats to rear		

15	Remove center console (1) toward rear by lifting side covers over air outlet ducts and seat adjustment rails, then pull center console (1) below bottom sections of instrument panel		
16	Reinstall in opposite order		