
AR88.10-P-1000K Remove/install front fenders 10.1.97

MODEL 208.3/4

- Fenders
- 2 Cover
- 3 4 5 Turn signal lamp
- Bolt
- Bolt

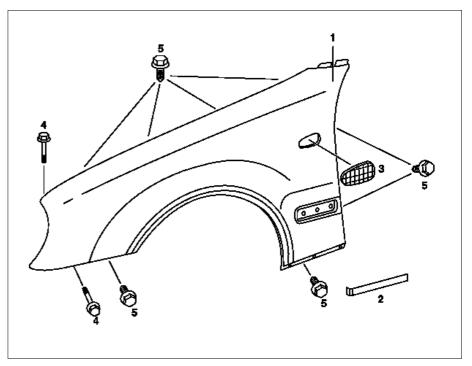

P88.10-0266-06


区 沃	Remove/Install		
i	When replacing front fender apply MB permanent underbody protection, preserve with cavity wax following installation	i Cavity wax Use approved wax preservative, see service microfiche, specifications for operating fluids, sheet no. 385	
1	Open engine hood and move to upright position	0.100(1.01 000	AR88.40-P-1000F
2	Remove fender liner in front fender		
3	Remove front bumper		AR88.20-P-2000K
1	Unscrew headlamp mounting bolts (4)	i Do not remove headlamp.	
;	Remove cover (2)	·	
6	Disconnect connector and remove turn signal lamp (3)		
7	Remove door retaining strap from A-pillar	Better accessibility to bolts (5) on A-pillar Avoid damaging paint on door and front fender Bolt at door catch	*BA72.10-P-1003-01A
3	Unscrew bolts (5).	Avoid damaging paint.	
)	Remove fender (1) toward front	Avoid damaging paint.	
10	Install in the reverse order	When replacing fender supply standard seam sealing, underbody and cavity preservation Refer to: ↓	
		Seam sealing following repair Model 208.3	AR97.10-P-4000K
		Model 208.4	AR97.10-P-4000KA
		Processing of corrosion protection materials before painting	AR97.20-P-0500A
		Cavity preservation following repair work	AR97.20-P-1500K
11	Check gaps on fender (1), correct	S Feeler gage	*129589032100
		i Dimensions ↓	
		Gap dimensions at hoods, doors and covers Model 208.3	AR60.00-P-0700-01K
		Gap dimensions at hoods, doors and covers Model 208.4	AR60.00-P-0700-01KA
		Gaps of hood	*BE60.00-P-1001-01A
		Gaps of fender	*BE60.00-P-1002-01A

Test and adjustment values, gap dimensions at hoods, doors and covers

Number	Designation	on			Model 208.3	Model 208.4
BE60.00-P-1001-01A	Gap dimension	Engine hood to fender	Dimension "A"	mm	4.0 (±0.5)	4.0 (±0.5)
		Engine hood to headlamp	Dimension "R"	mm	6.0 (±1.1)	6.0 (±1.1)
		Engine hood to radiator grille	Dimension "O"	mm	-	-
		Radiator grill to headlamp	Dimension "N"	mm	-	-
			Fig., see		AR60.00-P-0700-01K	AR60.00-P-0700-01K
E60.00-P-1002-01A	Gap dimension	Front door to A-pillar	Dimension "B"	mm	6.5 (±0.5)	5.0 (±1,0)
		Front door to fender	Dimension "H"	mm	4.0 (±0.5)	4.0 (±0.5)
		Front door to rear door	Dimension "I"	mm	-	-
		Front door to roof	Dimension "C"	mm	-	-
		Rear door to upper side section	Dimension "D"	mm	-	-
		Rear door to lower side section	Dimension "J"	mm	-	-
		Fender to A-pillar	Dimension "Q"	mm	-	-
		Front door to rear fender	Dimension "P"	mm	4.0 (±0.5)	4.0 (±0.5)
			Fig., see		AR60.00-P-0700-01K	AR60.00-P-0700-01K

Nm Front door

Number	Designation		Model 208.3/4
BA72.10-P-1003-01A	Bolt, door catch on A-pillar	Nm	25

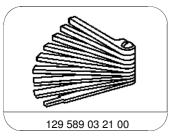

Feeler gage