






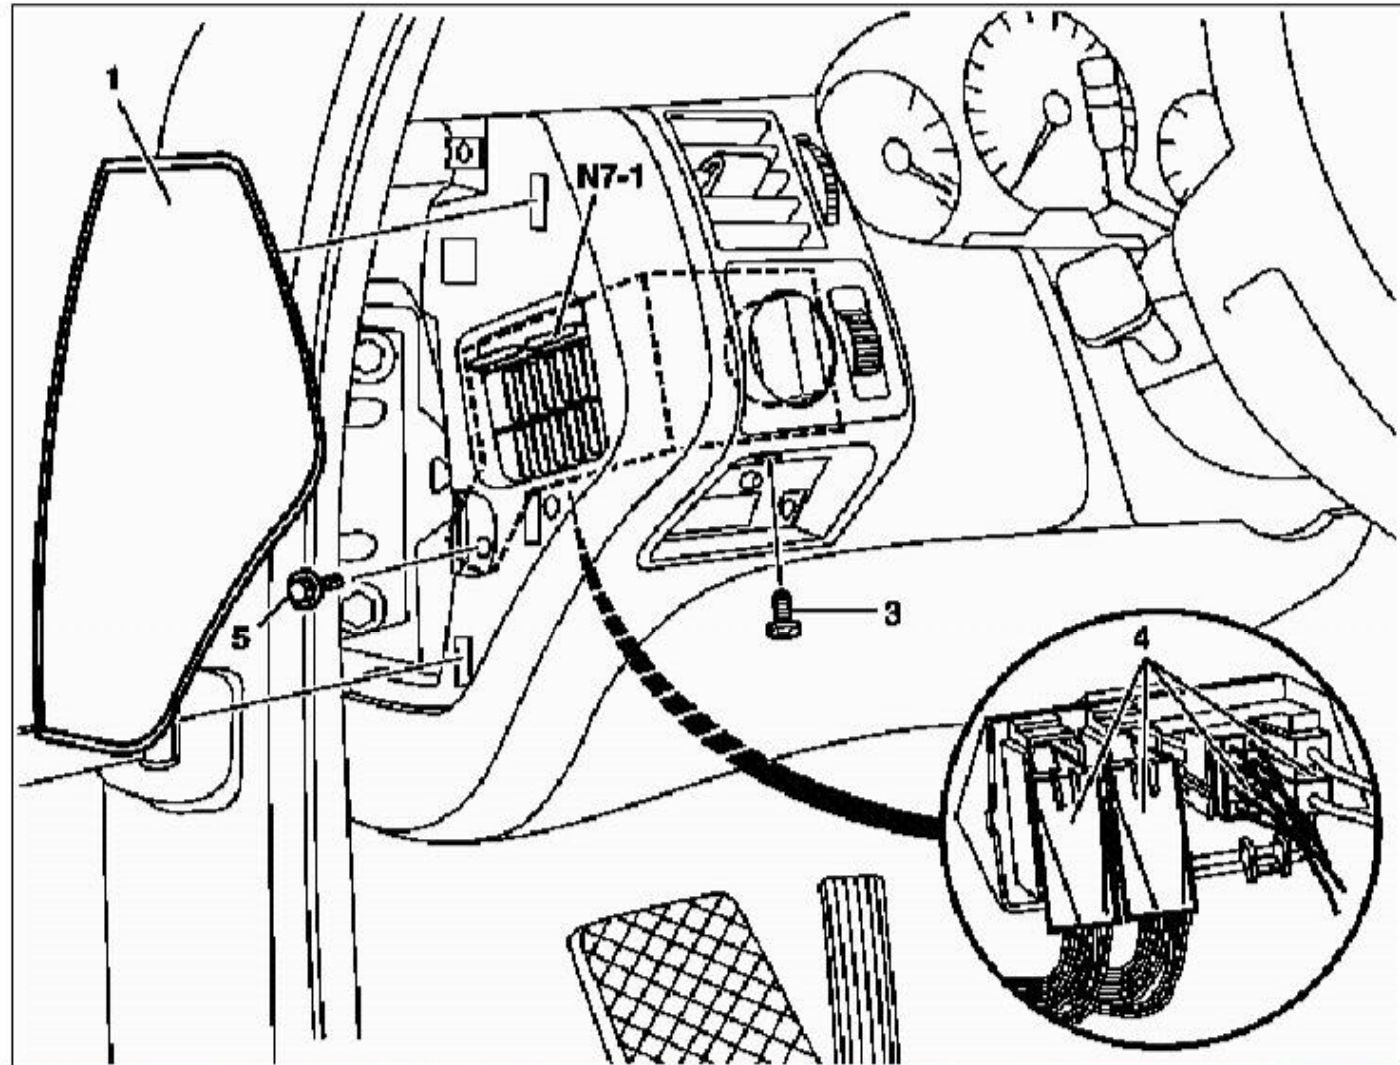


AR54.25-P-3260A **Removing and installing light module** **8.11.94**

MODEL 208, 210

Illustrated on model 210

- 1 *Cover*
- 3 *Screw*
- 4 *Electrical connections*
- 5 *Screw*
- N7-1 *Light module*



 	Removal, installation		
1	Disconnect ground cable from battery	 Insulate terminal on ground cable to prevent unintentional contact between disconnected ground cable and ground W10.	AR54.10-P-0003A
2	Unhook control cable on release lever for parking brake and remove release lever guide	 Installation: Clip release lever guide into mount on light module housing opposite direction of forward motion	
3.1	Remove bottom section of instrument panel (driver's side)	Model 208	AR68.10-P-1505K
3.2	Remove cover below instrument panel (driver's side)	Model 210	AR68.10-P-1500F
4	Unhook and disconnect electrical connections (4) on rear of light module (N7-1)	 Installation: Complete electrical connections only after installing light module	
5	Unscrew screws (3, 5)	 Installation: First screw in screw (3) in area of parking brake release lever. While screwing in support light module from below with hand and align on hole for second screw	
6	Remove light module (N7/1) from instrument panel		
 GF	Assignments and lead connections for fuse blocks:	Model 208 Model 210	GF54.15-P-1255EF GF54.15-P-1255EA
7	Reinstall in opposite order		