


## MODEL 208

- 1 Air nozzle
- 2 Screw
- 3 Air duct

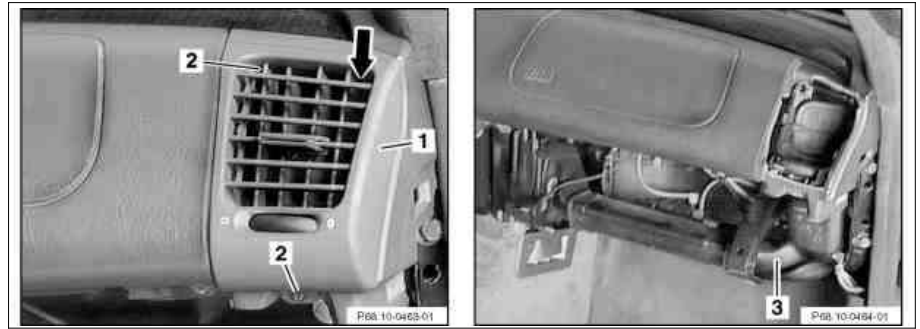

P68.10-0465-04

☒ ☒	Removal, installation		
1	Remove bottom section of instrument panel on driver's and passenger sides	Driver's side	AR68.10-P-1505K
		Passenger side	AR68.10-P-1507K
2	Unscrew screw (2)		
3	Pull catch (arrow) down and remove air nozzle (1)	<b>i</b> When installing the air duct (3) check installation position and attach air nozzle (1)	
4	Reinstall in opposite order		