



P27.10-0340-79

2a	Shift plate	Y3/6y1	Modulating pressure control solenoid valve
11	Plug socket	Y3/6y2	Shift pressure control solenoid valve
Y3/6	Electric control unit	Y3/6y3	1-2 and 4-5 shift solenoid valve
Y3/6b1	Transmission oil temperature sensor	Y3/6y4	3-4 shift solenoid valve
Y3/6n2	RPM sensor 2	Y3/6y5	2-3 shift solenoid valve
Y3/6n3	RPM sensor 3	Y3/6y6	Torque converter lockup PWM solenoid valve
Y3/6s1	Starter lockout contact		