


Front Door Panel: Removal and Replacement

AR72.10-P-1000Q Remove/Install Door Lining on Front Door


AR72.10-P-1000Q Remove/Install Door Lining on Front Door

- 1 Door lining
- 2 Bolt
- 3 Lock cover
- 4 Covering
- 5 SRS covering
- 6 Covering
- E17/3 Left door entrance/exit lamp
- E17/4 Right door entrance/exit lamp
- H4/23 Left front door mirror triangle speaker
- H4/24 Right front door mirror triangle speaker

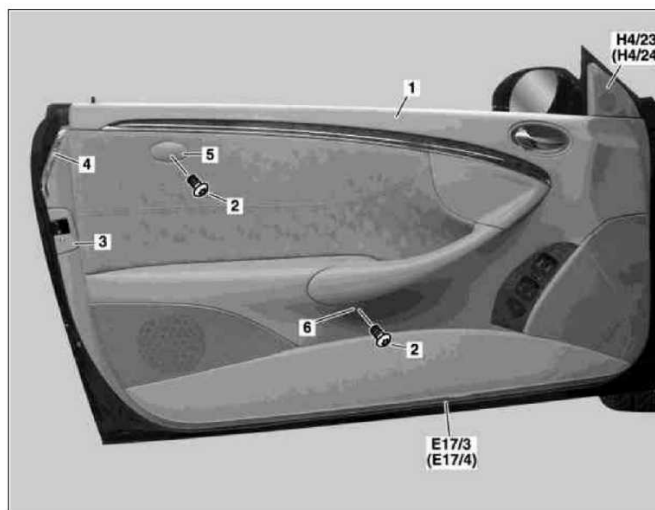


P72.10-2413-06

- 4 Covering
- 7 Bolts
- 8 Clips

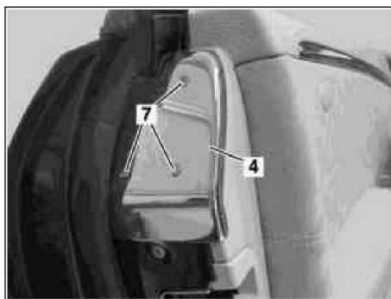

P72.10-2414-01

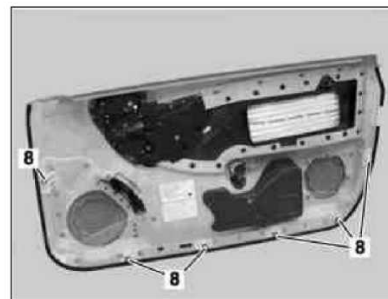




P72.10-2415-01

Modification notes

4.2.04	Disconnect/connect/remove ground line from battery		
--------	--	--	--

Modification Notes

	Remove/Install		
1	Unclip SRS covering (5)		
2	Remove bolt (2)		
3	Unclip covering (6).		
4	Remove bolt (2)		
5	Remove bolts (7)		
6	Remove covering (4)		
7	Unscrew bolt from lock cover (3)		
8	Remove lock cover (3)		
9	Remove left door mirror triangle speaker (H4/23) and right door mirror triangle speaker (H4/24) from mirror triangle		AR82.62-P-7850Q
10	Remove left door entrance/exit lamp (E17/3) and/or right door entrance/exit lamp (E17/4)		
11	Press door lining (1) off in areas of clips (8)	 Mounting wedge	*110589035900
12	Swivel door lining (1) a little and pry off from sealing rail toward top		
13	Unhook Bowden cable from inside door opener inside door opener		
14	Disconnect electrical line on door lining (1) for left door control module and right door control module from door lining (1).		
15	Remove lining (1)	 Check clips (8) for damage, replace if necessary	
16	Install in the reverse order		