


MODEL 203

MODEL 209

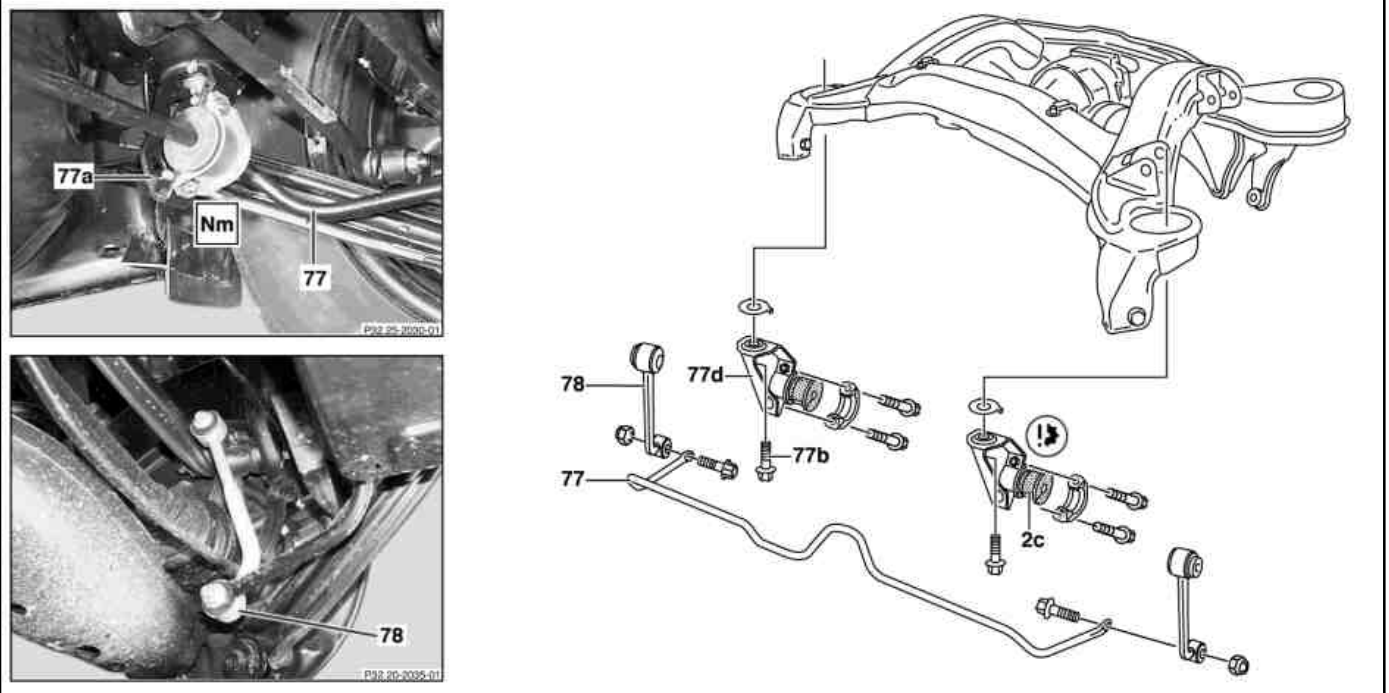

P32.20-2034-09

	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Lift vehicle on lifting platform.		AR00.60-P-1000P
2	Remove rear wheels Remove/install wheels	Vehicles with code P98 Black Series	AP40.10-P-4050Z
3	Unhook the exhaust system from the rear rubber retainers (6 pieces), lower and secure to prevent it from falling down	Vehicles with code P98 Black Series	
4	Detach torsion bar (77) on link rods (78)		AR32.30-P-0630-01P *BA32.20-P-1001-04C
5	Unscrew retaining bracket from bracket (77d) of torsion bar (77) on rear axle carrier		*BA32.20-P-1006-04C
6	Take off torsion bar (77)	Detach rubber mount (2c), check and replace if necessary Do not use grease or antifricition agent.	
	Checking		
7	Check link rods (78) for wear and damage	If necessary: ↓ Detach/attach and replace link rod on rear axle. 	AR32.30-P-0630-01P *BA32.20-P-1005-04C
8	Install in the reverse order		

Rear axle stabilizer bar

Number	Designation		Model 203	Model 209
BA32.20-P-1001-04C	Nut, link rod to stabilizer bar	Nm	40	40
BA32.20-P-1005-04C	Bolt, link rod to wheel carrier	Nm	40	50
BA32.20-P-1006-04C	Bolt, bracket to stabilizer bar bracket.	Nm	30	30