

# Display Document

Sales designation:	Vehicle ident. number:	Engine number:	Unit number:	Gr.:	Entry: Mod.Y.: Op. no.:
CLK 500	WDB209375*	113.968		82.60	

AR68.20-P-2400P	Remove/install ashtray housing from front center console	Full-size view	Validity OFF	Page: 2 / 3
-----------------	--	----------------	--------------	-------------

**MODEL 203, 209**


Shown on model 203.0

- 1 Catch lugs
- 2 Ashtray housing

E9/7 Front ashtray illumination





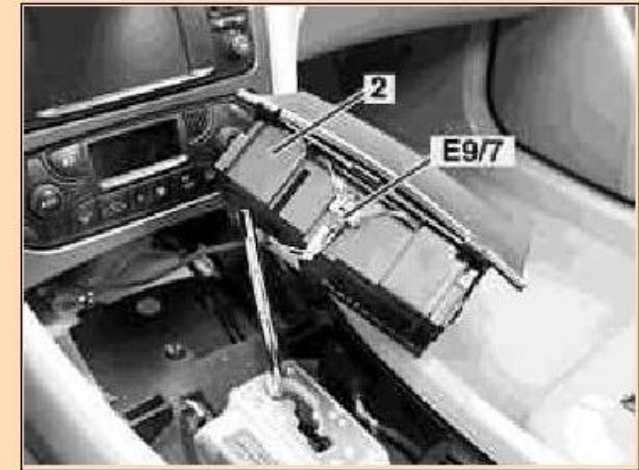



P68.20-2199-01



P68.20-2200-01

☒ ☒	<b>Remove/Install</b>		
⚠ <b>Danger!</b>	<b>Risk of explosion</b> caused by oxyhydrogen gas. <b>Risk of poisoning and caustic burns</b> caused by swallowing battery acid. <b>Risk of injury</b> caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Pour battery acid only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
ⓘ	Notes on battery	All models	AH54.10-P-0001-01A
1.1	Disconnect battery ground line	Model 209	AR54.10-P-0003Q

 <b>Danger!</b>	<b>Risk of explosion</b> caused by oxyhydrogen gas. <b>Risk of poisoning and caustic burns</b> caused by swallowing battery acid. <b>Risk of injury</b> caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Pour battery acid only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
	Notes on battery	All models	AH54.10-P-0001-01A
1.1	Disconnect battery ground line	Model 209	AR54.10-P-0003Q
2	Remove cover on gearshift lever	Model 203 Model 209 up to 31.5.04 Model 209 as of 1.6.04	AR68.20-P-2310P AR68.20-P-2310Q AR68.20-P-2310QA
3.1	Actuate clutch pedal and engage second gear	Transmission 716.6	
3.2	Actuate selector lever release actuator and move selector lever rod toward rear	Transmission 722.6	
 <b>GF</b>	Shift lock override, function	Model 203	GF27.10-P-3023P
 <b>GF</b>	Shift lock override, function	Model 209	GF27.10-P-3023Q
4	Open ashtray housing (2)		
5	Press catch lugs (1) back		
6	Remove ashtray housing (2)		
7	Disconnect electrical connector for front ashtray illumination (E9/7) from ashtray housing (2)		
8	Install in the reverse order		
9	Read out fault memory and erase	 Faults stored due to simulations, or cables being disconnected for assembly / testing operations, must be processed and erased from the fault memories after the work is completed.	
 <b>AD</b>	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A