


N123/4 Emergency call system control unit

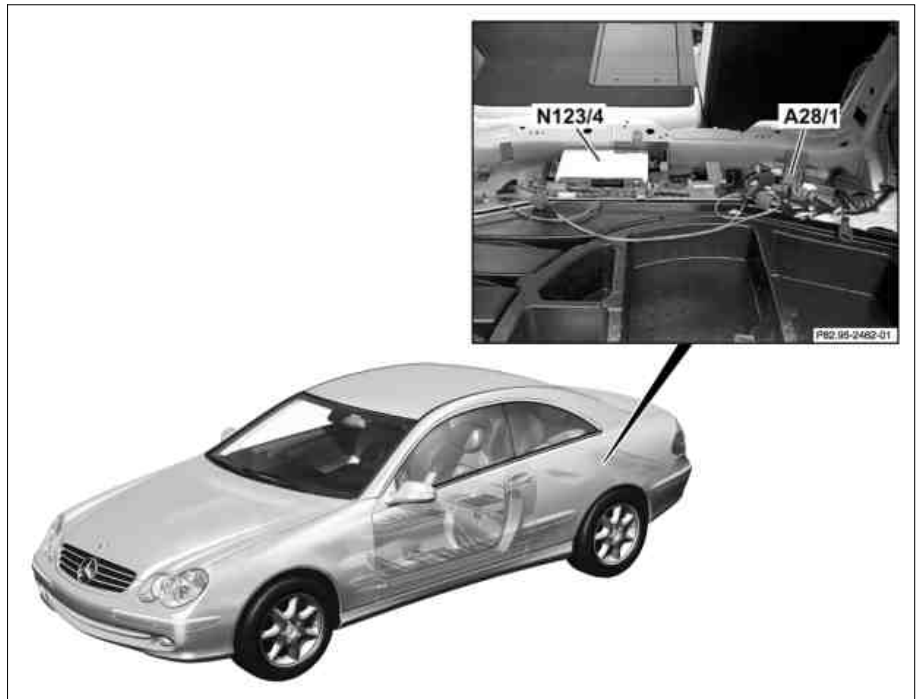

P82.95-2463-06

	TELE AID control unit, location	The emergency call system control unit (N123/4) is located in the trunk on the implement carrier.	
	TELE AID control unit, task		GF82.95-P-4100-02QM
	TELE AID control unit, design	<ul style="list-style-type: none"> ● Integral telephone module ● Integral navigation module ● Integrated additional battery ● Memory for vehicle-specific data ● Screened metal casing 	
	TELE AID control unit, function		GF82.95-P-4100-04QM