Remove/install ashtray housing in front center console

Normal view Validity OFF | Page:

2/

2

MODEL 203, 209

Shown on model 203.0


Catch lugs

AR68.20-P-2400P

Ashtray housing

E9/7 Front ashtray illumination



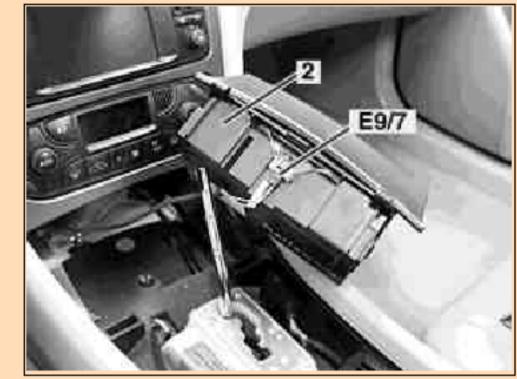

P68.20-2199-01

P68.20-2200-01

XX	Remove/Install		
⚠ Danger!	Risk of explosion from explosive gas. Risk of poisoning and caustic burns from swallowing battery electrolyte. Risk of injury through burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear protective gloves, acid-resistant clothing and safety glasses. Pour battery electrolyte only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
1	Disconnect ground cable of battery	Model 203	AR54.10-P-0003P
		Model 209	AR54.10-P-0003Q
(1)	Notes on battery	All models	AH54.10-P-0001-01A
2	Remove cover on shift lever	Model 203	AR68.20-P-2310P
		Model 209	AR68.20-P-2310Q
3.1	Actuate clutch pedal and engage second gear	with transmission 716.6.	
3.2	Actuate selector lever release actuator and move selector lever rod toward rear	for transmission 722.6	
4	Open ashtray housing (2)		
5	Press catch lugs (1) back		

AR68.20-P-2400P

2

Remove/install ashtray housing in front center console

Normal view Validity OFF Page:

2/

\mathbf{X}	Remove/Install		
⚠ Danger!	Risk of explosion from explosive gas. Risk of poisoning and caustic burns from swallowing battery electrolyte. Risk of injury through burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear protective gloves, acid-resistant clothing and safety glasses. Pour battery electrolyte only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
1	Disconnect ground cable of battery	Model 203 Model 209	AR54.10-P-0003P AR54.10-P-0003Q AH54.10-P-0001-01A
2	Notes on battery Remove cover on shift lever	All models Model 203 Model 209	AR68.20-P-2310P AR68.20-P-2310Q
3.1	Actuate clutch pedal and engage second gear	with transmission 716.6.	
3.2	Actuate selector lever release actuator and move selector lever rod toward rear	for transmission 722.6	
4	Open ashtray housing (2)		
5	Press catch lugs (1) back		
6	Remove ashtray housing (2)		
7	Disconnect connector for front ashtray illumination (E9/7) from ashtray housing (2)		
8	Install in the reverse order		
9	Perform basic programming	Model 209 Model 203 i Only if no quiescent current retention device has been used.	AR00.19-P-0200Q AR00.19-P-0200P
10	Read DTC memory and erase	i STAR Diagnosis tool.	
11	Perform function check		