

## Text message (SMS)

### Information and requirements

The functions can be used if the Bluetooth® mobile phone supports the MAP (Message Access Profile) Bluetooth® profile.

When the mobile phone is connected, the 30 most recent text messages which are currently stored on the phone are loaded to the COMAND's text message inbox and displayed.

- ❗ COMAND may not load all the most recent text messages:


This is possible in exceptional cases, such as with certain mobile phones, or when there are a lot of text messages in the phone's inbox.

If the above conditions are fulfilled, new incoming text messages appear in the COMAND text message inbox. In addition, a tone sounds and the ✉ icon appears. The symbol disappears once you have read the text message. The ✉ mail symbol is displayed when the text message memory is full. The symbol disappears once you delete at least one text message.

### Displaying the text message (SMS) inbox

#### Overview

- ▶ Press the **TEL** function button.
- ▶ Select **Text Message** in the telephone basic menu by turning **⏮** the COMAND controller and press **⏹** to confirm. The text message inbox appears.

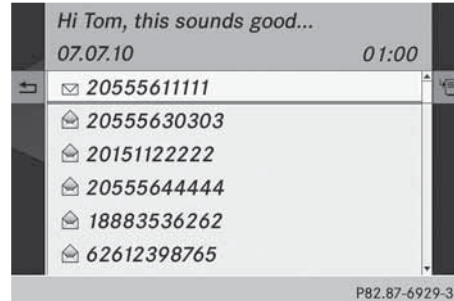

Text message (SMS) inbox

The shortened text or sender of the selected text message (depending on the settings) as well as the date and time at which the selected text message was received are displayed at the top and in the middle. The ✉ symbol appears if a text message has not yet been read.




### Reading a text message (SMS)

- ▶ Select a text message in the text message inbox by turning **⏮** the COMAND controller and press **⏹** to confirm. The text message appears.
- ▶ **To scroll through the display or select phone numbers in a text message:** turn **⏮** the COMAND controller. The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ **To return to the list:** press **⏹** and select **Back**.

### Listening to a text message





 


You can set the language (> page 45) and the speed of the read-aloud function (> page 42).

- ▶ Press **⏹** while a text message is being displayed, select **Read Aloud** and press **⏹** to confirm. COMAND reads out the text message.

- ▶ **To cancel the read-aloud function:** press the  button.
- or
- ▶ Press , select **Cancel Read-Aloud Function** and press  to confirm.



 
### Switching the display



You can switch between displaying the text message sender or the text message content. The sender display shows the sender of the text message. If the sender is stored in the COMAND phone book, the name is displayed. The text display shows the first few words of a text message.

- ▶ Select a text message in the text message inbox by turning  the COMAND controller.
- ▶ **To switch to the text display:** select the list symbol to the right of the text message by sliding  the COMAND controller and press  to confirm.
- ▶ Select **Display Text** and press  to confirm.  
The view changes.
- ▶ **To switch to the sender display:** select the list symbol to the right of the text message by sliding  the COMAND controller and press  to confirm.
- ▶ Select **Display Sender** and press  to confirm.  
The view changes.


### Displaying details and phone numbers

COMAND can also show a shortened sender display in full.

- ▶ Select a text message in the text message inbox by turning  the COMAND controller.
- ▶ Select the list symbol to the right of the text message by sliding  the COMAND controller and press  to confirm.



- ▶ Select **Details** and press  to confirm.  
The detailed display appears.
- ▶ **To close the detailed view:** slide  the COMAND controller.

### Returning to the telephone basic menu

- ▶ Press the  back button.


### Managing text messages


#### Calling a text message (SMS) sender



- ▶ Press  the COMAND controller while the text message is being displayed.
- ▶ Select **Call Sender** and press  to confirm.  
The telephone makes the call to the sender.

#### Using phone numbers in the text

You can use numbers that are red and underlined in text messages (SMS).

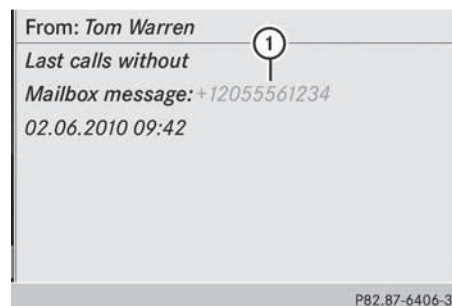
-  It is possible that a highlighted numerical sequence may not contain a telephone number.
- ▶ Select a usable number when the text message is displayed.



-  Usable numerical sequence
- ▶ Press  the COMAND controller and select **Use**.
- ▶ Select **Call**.  
The telephone makes the call.

### Calling up displays

- ▶ Press the **sys** button.
- ▶ In the system menu, slide **↑** the COMAND controller up until the **Full Screen** option is selected.
- ▶ Press the COMAND controller. The system display is shown as full screen (without system menu).
- ▶ Slide **←** the COMAND controller repeatedly until the fuel consumption indicator appears. The COMAND display shows the fuel consumption for the last 15 minutes of the journey.

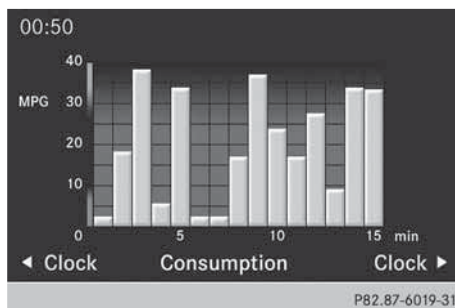

Every bar of the graph displays the average value for one minute.

The fuel consumption display may differ from the display in the **From Start** trip computer in the **Trip** menu; see the vehicle Operator's Manual.

### Exiting full screen view

- ▶ Press the COMAND controller. The system menu appears.

## ON&OFFROAD display

### Overview

The ON&OFFROAD display is available for the M-Class.

The COMAND display can show the settings and status of the ON&OFFROAD functions.

You can find more information about the ON&OFFROAD functions and the display itself in the vehicle Operator's Manual.

### Calling up displays

- ▶ Press the **sys** button.
- ▶ In the system menu, slide **↑** the COMAND controller up until the display/selection window is selected.
- ▶ Slide **←** the COMAND controller until the ON&OFFROAD display appears. The COMAND display shows the settings and status of the ON&OFFROAD functions.

### Exiting the display

- ▶ Slide **←** the COMAND controller until the desired display (clock or fuel consumption) is shown.

## Text reader settings

### Setting the text reader speed

- ▶ Press the **sys** button.
- ▶ Select **Settings** by turning **↑** the COMAND controller and press the COMAND controller to confirm.
- ▶ Select **Text Reader Speed** and press the COMAND controller to confirm. A list appears. The **•** dot indicates the current setting.
- ▶ Select a setting by turning **↑** the COMAND controller and press the COMAND controller to confirm.

## Voice Control System settings

### Opening/closing the help window

In addition to the audible instructions, the help window will show you other information