



- ENGINE 157, 278 in MODEL 216
- ENGINE 157, 276, 278 in MODEL 221
- ENGINE 157, 276, 278 in MODEL 218
- ENGINE 276 in MODEL 172, 204
- ENGINE 276, 278 in MODEL 207
- ENGINE 276, 278, 157 in MODEL 212
- ENGINE 276 in MODEL 166, 251

Shown on engine 157

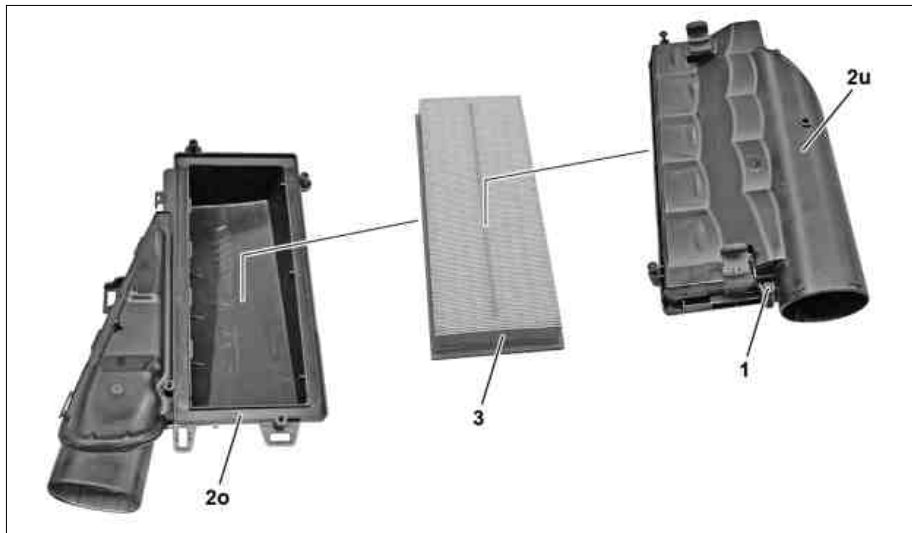

 
 

P09.10-2251-05

Shown on engine 276

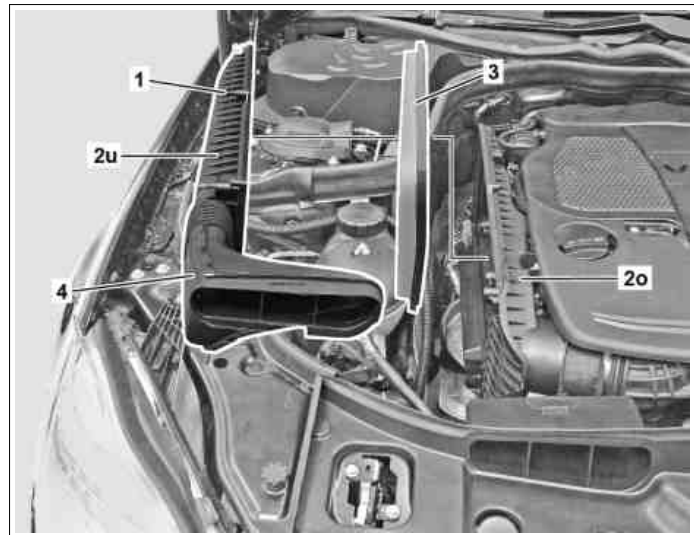

P09.10-2255-11

	Remove/install		
Danger!	Risk of injury to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1	Switch off ignition		
2	Open engine hood	Model 166 Model 207, 212 Model 251 Model 172, 204, 218, 216, 221	AR88.40-P-1000GQ AR88.40-P-1000EW AR88.40-P-1000RT
3.1	Remove both air filter housings (2o)	Engine 157, 278 Place air filter housing (2o) onto padded base. Damage can otherwise occur.	
3.2	Remove air filter housing (2o).	Model 166, 251 with engine 276 Place air filter housing (2o) onto padded base. Damage can otherwise occur. 	*BA09.10-P-1001-01M *BA09.10-P-1002-01M

5	Loosen bolts (1)	 Bolts (1) remain in housing cover (2u).	
6	Remove housing cover (2u) and remove air filter element (3)	 Installation: Replace air filter element (3), do not clean.	
	Clean		
7	Clean insides of housing cover (2u) and air filter housing (2o)	Cleaner from package	*BR00.45-Z-1028-04A
8	Install in the reverse order		

 **Air filter**

Number	Designation		Engine 276
BA09.10-P-1001-01M	Bolt, air filter to cylinder head cover	Nm	9
BA09.10-P-1002-01M	Bolt, air filter to air intake pipe support brace	Nm	9

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Cleaner from package	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 www.wuerth.de