


MODEL 218



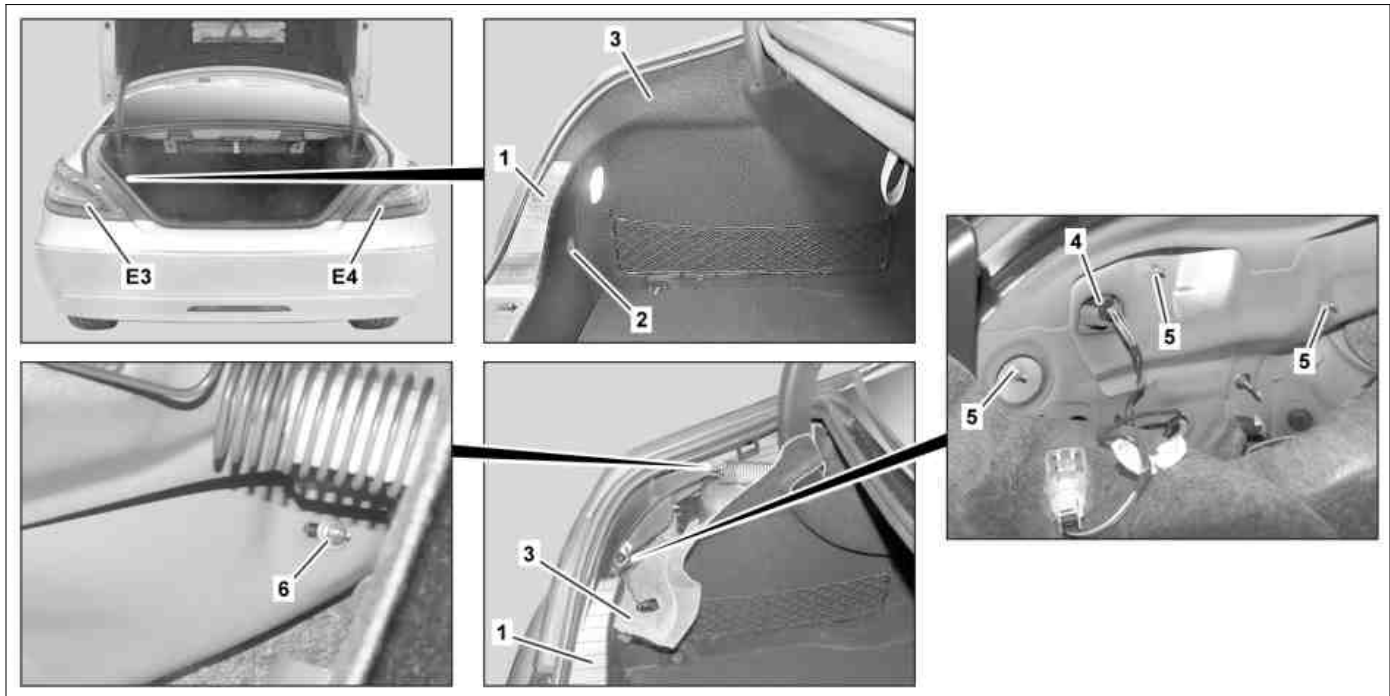


P82.10-6515-09

Shown on model 218.3

1 Rear center section paneling
2 Clip
3 Side paneling

4 Electrical connector
5 Nuts
6 Nut

E3 Left rear lamp unit
E4 Right rear lamp unit

 	Remove/install		
1	Remove right or left clip (2) and loosen rear center section paneling (1) on the side paneling (3)	MODEL 218.3	
2	Loosen side paneling (3) in area of left rear lamp unit (E3) or right rear lamp unit (E4) until nuts (5, 6) are accessible	MODEL 218.3	
3	Remove left or right load compartment paneling at rear side	MODEL 218.9	AR68.30-P-1180ELX
4	Unplug electrical connector (4) from left rear lamp unit (E3) or right rear lamp unit (E4)		
5	Unscrew nuts (5, 6)	 Installation: In order to ensure that left rear lamp unit (E3) or right rear lamp unit (E4) is seated correctly, nut (6) must be tightened at the end.	
6	Remove left rear lamp unit (E3) and right rear lamp unit (E4)		
7	Install in the reverse order		