


MODEL 218

Shown on left side of vehicle

- 1 B-pillar cover
- 2 Pin
- 3 Bolts
- 4 Sleeve

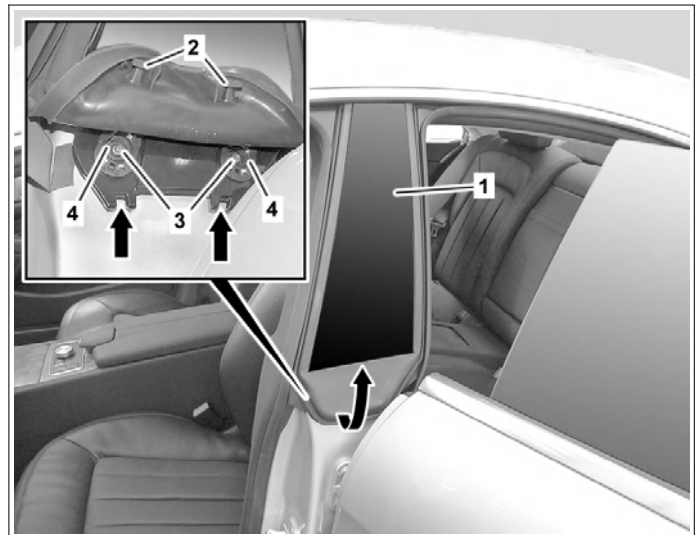

P88.80-2192-11


☒ ☒	Remove/install		
1	Open front door and rear door		
2	Pull rubber lip downward on B-pillar cover (1) and guide pins (2) out of mounts (arrows) on B-pillar cover (1)	i Installation: Ensure that pins (2) are seated correctly on mounts (arrows) on B-pillar cover (1).	
3	Unscrew bolts (3) from B-pillar cover (1)	i Installation: Check transition from crank window to B-pillar cover (1), adjust if necessary. Only turn sleeves (4) to adjust transition between crank window and B-pillar cover (1). Check transition between front crank window and B-pillar cover (1), adjust if necessary. Dimension "g" between window outer surface to B-pillar cover Check transition between rear crank window to B-pillar cover (1), adjust if necessary. Dimension "h" between window outer surface and B-pillar covering	AR72.10-P-1950-03EL *BE72.10-P-1004-01E AR72.12-P-1950-02EL *BE72.12-P-1004-01C
4	Loosen B-pillar cover (1) at top with assembly wedge	⊗ Mounting wedge	*110589035900
5	Remove B-pillar cover (1)		
6	Install in the reverse order		

Test and adjustment values for front door

Number	Designation	Model 218
BE72.10-P-1004-01E	Dimension "g" between window outer surface to B-pillar cover	mm 0.0 (-0.5/+1.0)

Check and adjustment values for rear door

Number	Designation	Model 218.3
BE72.12-P-1004-01C	Dimension "h" between window outer surface and B-pillar covering	mm 0.0 (+0.5/-1.0)

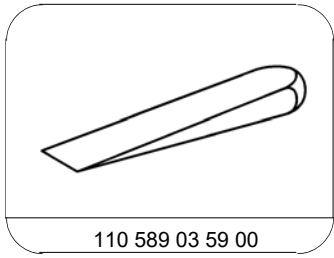

110 589 03 59 00

Mounting wedge