Model 117, 118, 156, 166, 167, 172, 176, 177, 204, 207, 212, 217, 218, 222, 231, 242, 246, 247, 292, 463

There is one variant on the front axle:

• One brake wear sensor on the right-hand side of the vehicle.

The following variants exist at the rear axle:


• No brakepad wear sensor on the right-hand side of the vehicle. One brake wear sensor on the right-hand side of the vehicle.

When replacing the brakepads, reinstall the brakepad wear sensor at the same position.

i Route or install right front brakepad wear sensor line (2) or electrical connector (1) as shown in the picture.

Shown on front axle on model 204.041

- Electrical connector
- Right front brake wear sensor

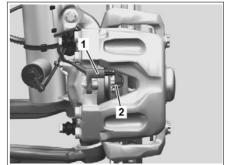


P42.10-3090-01

i Route or install right rear brakepad wear sensor line (3) or electrical connector (4) as shown in the picture.


Shown on rear axle on model 204.041

- Right rear brake wear sensor
- Electrical connector

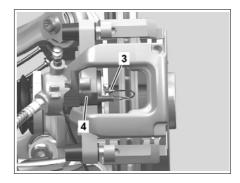

P42.10-3091-01

For reasons of replacement part simplification, install the brakepads so that the brakepad wear sensors can be reinstalled at the corresponding assembly positions. The corresponding assembly position of the brakepad wear sensors is specified in the list below

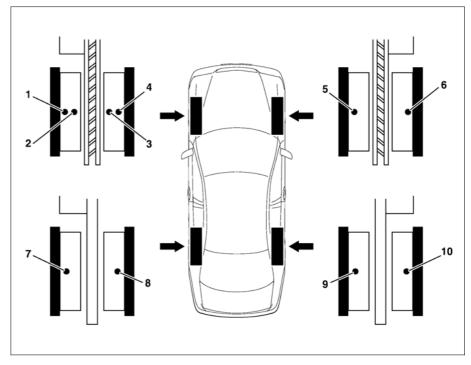

P42.10-2231-06

Front axle version 5

- Model 117 with engine 270, 651
- Model 156 with engine 270, 651
- Model 166 with engine 276, 278, 642, 651
- Model 172 with engine 152, 271, 276, 651
- Model 176 with engine 270, 651
- Model 177 with engine 260, 608, 282
- Model 204 with engine 156, 271, 272, 642, 646, 651

- Model 212 with engine 273
- Model 217 with engine 156, 278, 279
- MODEL 218 with ENGINE 278
- Model 222 with engine 276, 278, 651
- MODEL 231 with ENGINE 157, 276, 278, 279
- Model 242 with engine 133
- Model 292 with engine 157
- Model 463 with engine 177

- Model 207 with engine 271, 272, 642
- MODEL 212 with ENGINE 156, 271, 272, 642, 651
- Model 218 with engine 157, 276, 642, 651
- Model 242 with engine 270, 651
- MODEL 246 with ENGINE 270, 651
- Model 463 with engine 176, 656

Front axle, version 6

- Model 117 with engine 133
- Model 156 with engine 133
- Model 166 with engine 157
- Model 176 with engine 133
- Model 207 with engine 273

Rear-axle version 9

- Model 166 with engine 157, 276, 278, 642, 651
- Model 172 with engine 152, 271, 276, 651
- Model 204 with engine 156, 272, 642, 651
- Model 207 with engine 271, 272, 273, 642
- Model 212 with engine 156, 271, 272, 273, 642, 651
- MODEL 217 with ENGINE 157, 278, 279
- Model 218 with engine 157, 276, 278, 642, 651
- Model 222 with engine 276, 278, 651
- MODEL 231 with ENGINE 157, 276, 278, 279
- Model 292 with engine 157, 276, 278, 642
- Model 463 with engine 176, 177, 656