Model 204.0 (except 204.077), 204.2 (except 204.277), 204.9, 211.0/2/6 as of 8/15/07, 212, 218, 219.3 as of 8/14/07

Model 463.202/236/237

up to model year 2013

as of model year 2010, /model refinement package 2012

Model 463.222/270/271/303/340/341

up to model year 2013 As of model year 2010

Model 463.242


as of model year 2013 up to model year 2019


Model 463.306/336


up to model year 2013

Model 463.346

up to model year 2013 /FACELIFT 2012

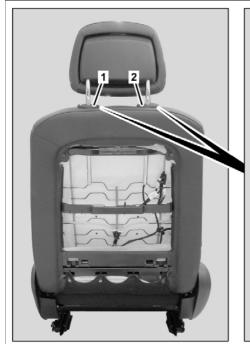

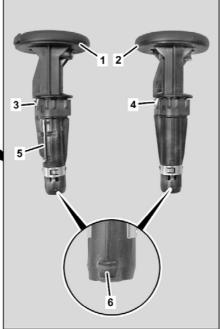

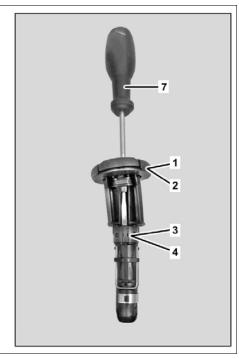

P91.16-2650-09

Shown on model 204, right front seat

Left head restraint guide

2 Right head restraint guide

3 Catch hook

4 Catch hook

5 Spring

6 Catch hook

7 Screwdriver

\boxtimes	Remove		
1	Remove left or right head restraint at front seat	463.242	
		Remove/install head restraint on front seatModel 463.242 as of model year 2013 up to model year 2019	AR91.16-P-0040CW
2	Break out catch hooks (6) at left head restraint guide (1) or at right head restraint guide (2)	Left head restraint guide (1) or right head restraint guide (2) must be replaced.	
3	Press catch hooks (3) at left head restraint guide (1), as shown, using a screwdriver (7) and pull out left head restraint guide (1) upward		
4	Press catch hooks (4) at right head restraint guide (2), as shown, using a screwdriver (7) and pull out right head restraint guide (2) upward		
X	Install		

5	Insert left head restraint guide (1) into backrest frame from above and engage in backrest frame	The left head restraint guide (1) is recognizable by the springs (5). Position left head restraint guide (1) such that the catch hook (3) faces to the left.	
6	Insert right head restraint guide (2) into backrest frame from above and engage in backrest frame	The right head restraint guide (2) is not equipped with a spring (5). Position right head restraint guide (2) such that the catch hook (4) faces to the left.	
7	Install head restraint at front seat	463.242	
		Remove/install head restraint on front seat	AR91.16-P-0040CW