


**MODEL 218**

Shown without code (B03) ECO start/stop function


F32 Front electrical prefuse box

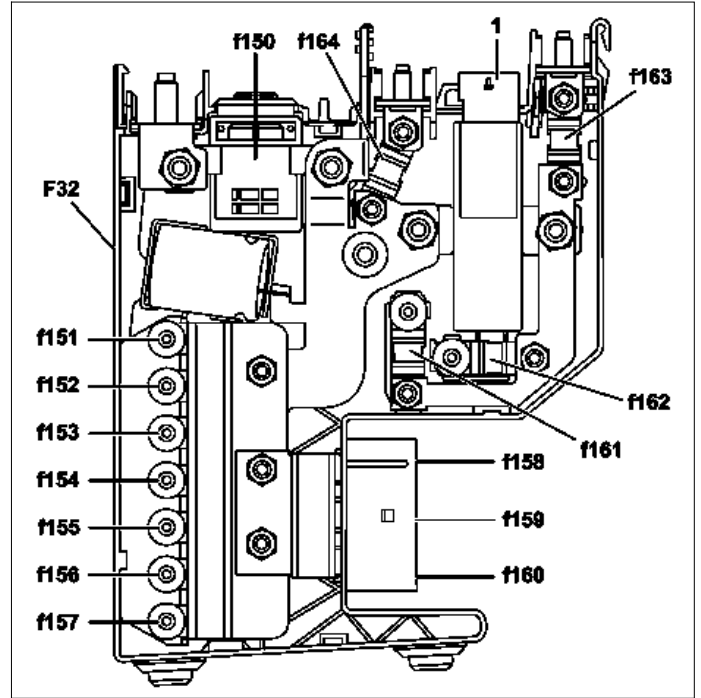

P54.15-3175-12

Shown with code (B03) ECO start/stop function

F32 Front electrical prefuse box

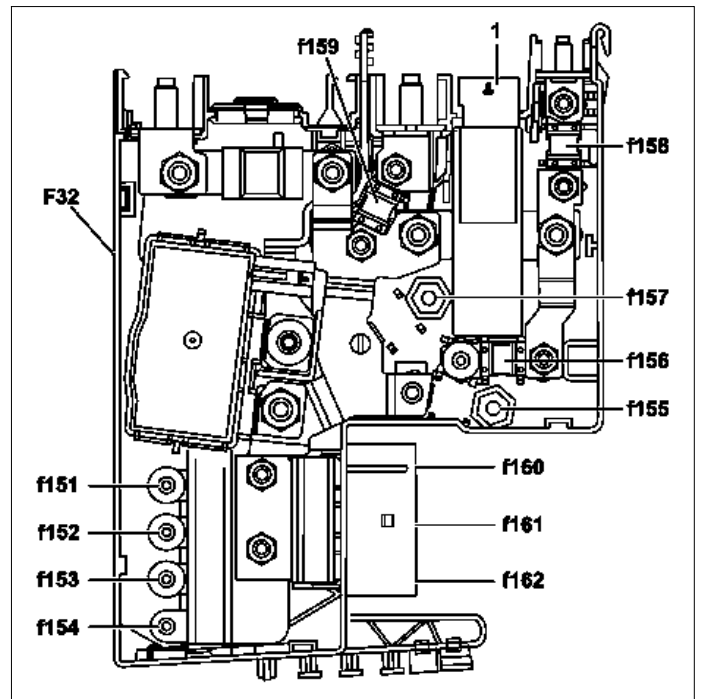

P54.15-3325-12

Fuse	Circuit	Line ID (line fused)	Fused function	Rating in amperes (A)
f150	30	35.0 BK	<b>Valid without code (B03) ECO start/stop function:</b> Pyrofuse 150 (F32f150)	–
f151	30	12.0 RD	Electrical power steering control unit (N68)	60
f152	30	6.0 RD	Front SAM control unit with fuse and relay module (N10/1)	60
f153	30	–	Spare	100
f154	30	10.0 RD	<b>Valid for 650 W fan motor:</b> Fan motor for internal combustion engine and air conditioning with integrated control (M4/7)	100
		12.0 RD	<b>Valid for 800 W fan motor:</b> Fan motor for internal combustion engine and air conditioning with integrated control (M4/7)	

f155	30	16.0 RD	<b>Valid for diesel engine:</b> PTC heater booster (R22/3)	150
f156	30	–	Spare	–
f157	30	16.0 RD	Front SAM control unit with fuse and relay module (N10/1)	150
f158	30	4.0 RD	<b>Valid for left-hand drive vehicles:</b> Blower regulator (A32n1)	50
		4.0 RDGN	<b>Valid for right-hand drive vehicles without code (233) DISTRONIC PLUS or without engine 157:</b> Electronic Stability Program control unit (N30/4)	
		4.0 RDGN	<b>Valid with right-hand drive vehicles with code (233) DISTRONIC PLUS or with engine 157:</b> Premium Electronic Stability Program control unit (N30/7)	
f159	30	2.5 RDYE	<b>Valid for right-hand drive vehicles without code (233) DISTRONIC PLUS or without engine 157:</b> Electronic Stability Program control unit (N30/4)	50
		4.0 RDYE	<b>Valid with right-hand drive vehicles with code (233) DISTRONIC PLUS or with engine 157:</b> Premium Electronic Stability Program control unit (N30/7)	
f160	30	6.0 RD	<b>Valid for code (489) AIRmatic (air suspension with continuous adjustment damping) or with code (488) Steel/air suspension</b> AIRmatic relay (K67)	60
f161	30g	–	Spare	–
f162	30g	10.0 RDWH	Front SAM control unit with fuse and relay module (N10/1)	100
f163	30g	16.0 RD	<b>Valid without code (B03) ECO start/stop function:</b> Rear SAM control unit with fuse and relay module (N10/2)	150
f164	30	10.0 RD	<b>Valid without code (B03) ECO start/stop function without engine 642:</b> Rear SAM control unit with fuse and relay module (N10/2)	100
		16.0 RD	<b>Valid without code (B03) ECO start/stop function with engine 642:</b> Rear SAM control unit with fuse and relay module (N10/2)	