

**MODEL 172, 204, 207, 212, 218, 219, 231**

**Repair materials**


Number	Designation	Order number
BR00.45-Z-1001-06A	Long-life grease	A 000 989 63 51 11

- 1 Check front propeller shaft (20a), rear propeller shaft (20b), thrust plate (1), rubber boot (2) and propeller shaft center support bearing (7) for wear and damage.

**i** If necessary, replace the affected part.

- 2 Grease splined profile of rear propeller shaft (20b) using long-life grease.

**Position of propeller shaft without clamp connection**

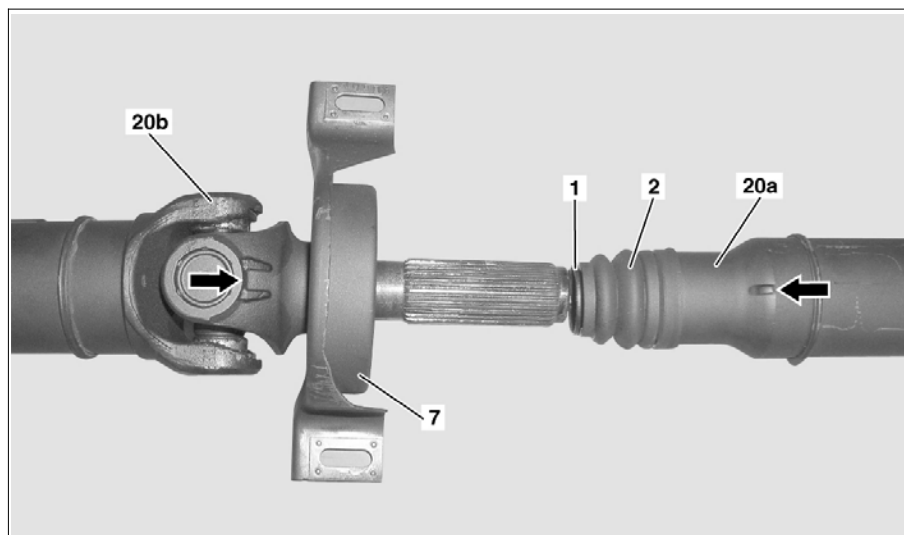

P41.10-2314-05

- 3 Connect front propeller shaft (20a) and rear propeller shaft (20b).

**i** The humps of the front propeller shaft (20a) must be located between the two humps on the rear propeller shaft (20b) (arrows). Ensure that rubber boot (2) is seated properly.