

Controls in detail

Control system



- ▶ Press button **+** or **-** to switch function on or off.

Dynamic seat* submenu

Access the Dynamic seat submenu via the Settings menu. Use the Dynamic seat submenu to change the settings for the dynamic seats. The following functions are available:

Function	Page
Adjust driver seat	170
Adjust passenger seat	170

Adjusting the dynamic seat

The function dynamic seat adjustment lets you determine the way the seat adjusts while driving.

- ▶ Move the selection marker with the **+** or **-** button to the Dynamic seat submenu.
- ▶ Press button **↶** or **↷** repeatedly until you see Dyn. multi-cont. seat, driver for the driver seat or Dyn. multi-cont. seat, fr. pass. for the passenger seat in the multifunction display.

The selection marker is on the current setting.



- ▶ Press button **+** or **-** to switch function to Weak or Powerful.

The following settings are available:

Weak	(Comfort) Less lateral support and slow air pressure build-up in the air chambers of the backrest side bolsters
Powerful	(Sporty) Strong lateral support and fast air pressure build-up in the air chambers of the backrest side bolsters