


MODEL 219.3

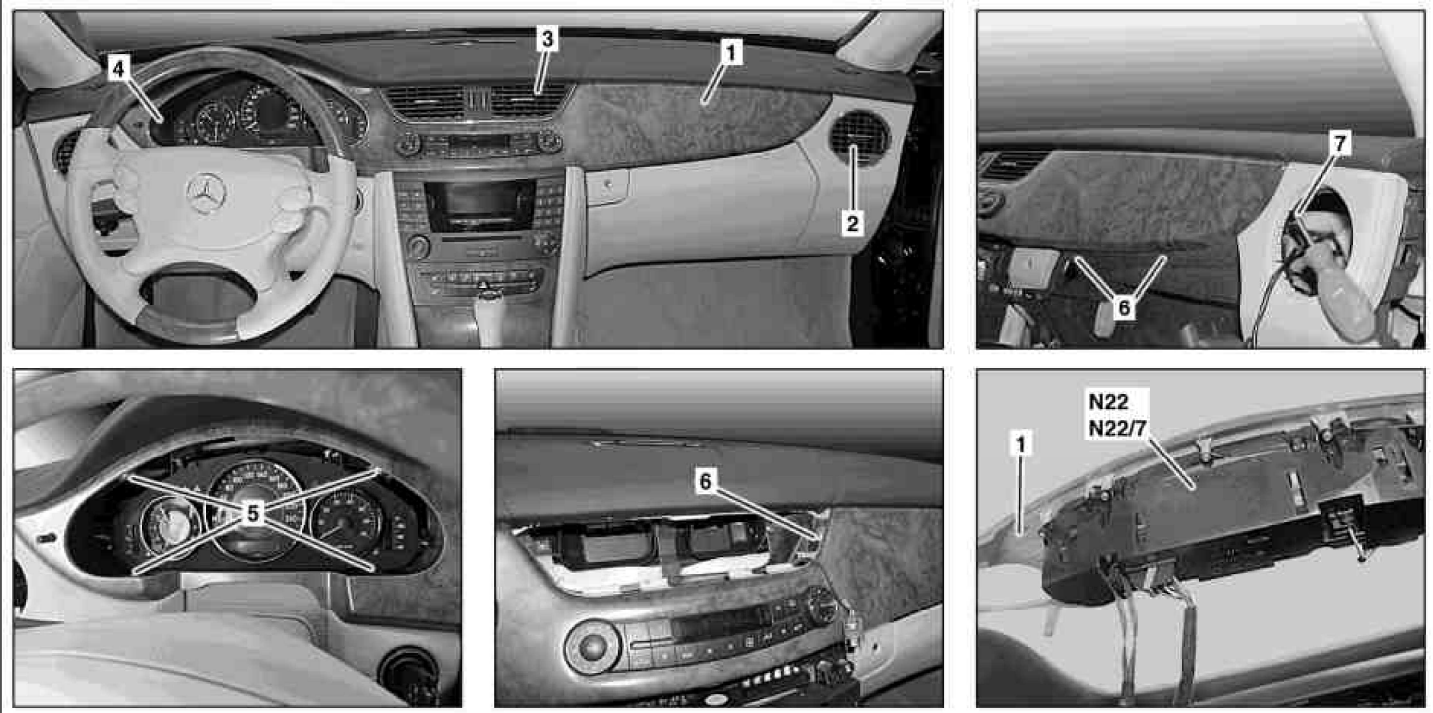

P68.10-3272-09

- 1 Trim strip
 2 Right air vent
 3 Center air vent
 4 Instrument cluster covering
 5 Bolts

- 6 Bolts
 7 Screw
 N22 AAC control and operating unit
 (without code (581) Comfort automatic
 air conditioning)

- N22/7 Comfort AAC control and operating
 unit
 (with code (581) Comfort automatic
 air conditioning)

	Remove/Install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Disconnect battery ground line		AR54.10-P-0003TX
2	Remove right air vent		AR68.10-P-1100TX
3	Remove center air vent (3)		AR68.10-P-1150TX
4	Remove instrument cluster cover (4)		AR68.10-P-1550TX
5	Open glove compartment.		
6	Unscrew bolts (5)		
7	Unscrew bolts (6) with battery-powered screwdriver	Battery-powered screwdriver	*WE58.40-Z-1008-03A
8	Loosen bolt (7)		
9	Remove trim strip (1) until electrical connectors on AAC control and operating unit (N22) or comfort AAC control and operating unit (N22/7) are accessible	Cover steering column module paneling to prevent damage to trim strip (1) or steering column module paneling Observe reset button of instrument cluster	
10	Disconnect electrical connectors from AAC control and operating unit (N22) or comfort AAC control and operating unit (N22/7)		
11	Remove trim strip (1) together with AAC control and operating unit (N22) or comfort AAC control and operating unit (N22/7)		

12.1	Remove trim strip (1) with AAC control and operating unit (N22) or comfort AAC control and operating unit (N22/7)	<p>Only when replacing trim strip (1).</p> <p>ⓘ Lay trim strip (1) down with front toward a suitable subsurface to prevent damage to trim strip (1)</p> <p>ⓘ See: @</p> <p>Remove/install control and operating unit</p>	AR83.40-P-6350TY
13	Install in the reverse order		

Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1008-03A	Battery-powered screwdriver
--------------------	-----------------------------