


MODEL 219.3

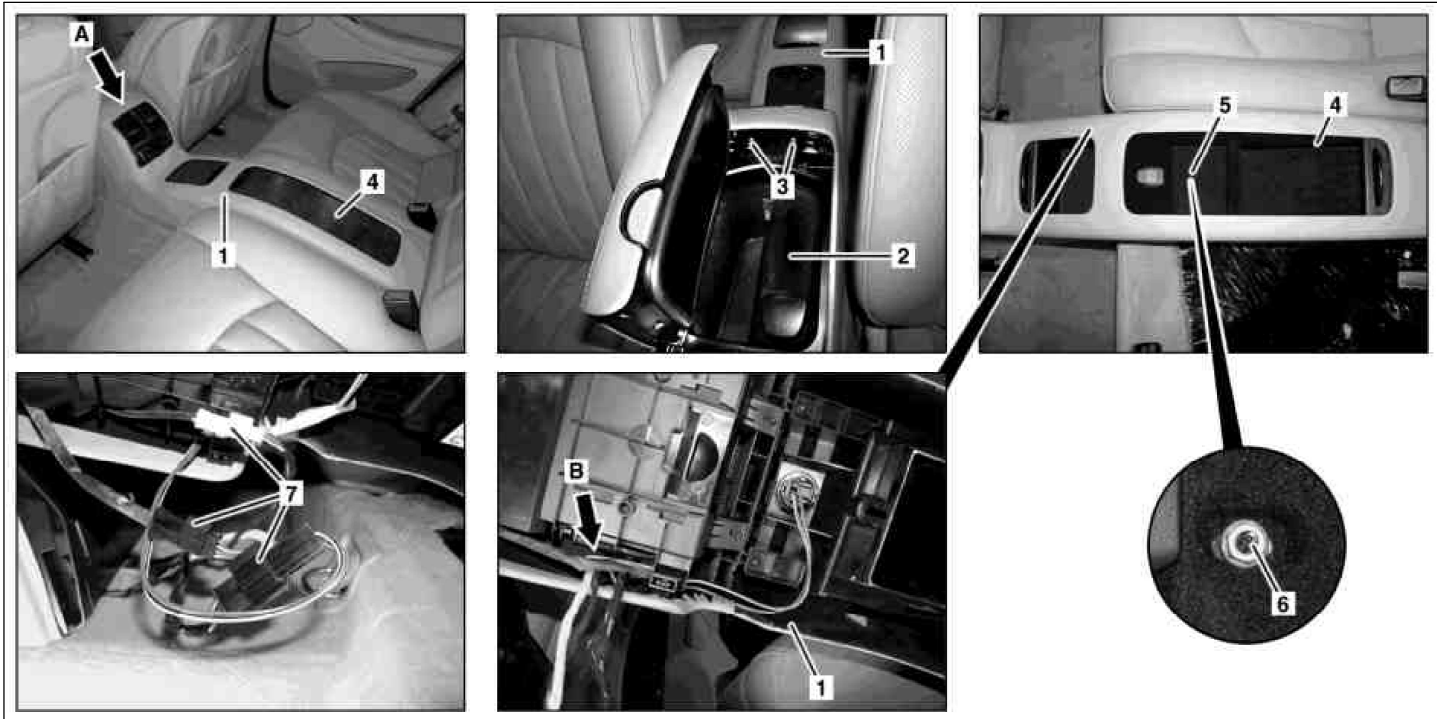

P68.20-3246-09

- | | | | | | |
|---|---------------------------|---|--------------------------|---|-----------------------|
| 1 | Rear center console. | 4 | Rear stowage compartment | 6 | Nut |
| 2 | Front stowage compartment | 5 | Insert | 7 | Electrical connectors |
| 3 | Bolts | | | | |

| | Remove/Install | | |
|----|--|---|------------------|
| 1 | Remove left or rear seat cushion | | AR91.12-P-1020TX |
| 2 | Open cover on front stowage compartment (2) | | |
| 3 | Remove bolts (3) | | |
| 4 | Open rear stowage compartment (4) and remove insert (5) | | |
| 5 | Unscrew nut (6) | | |
| 6 | Forcefully pull rear center console (1) upward in front arrow (arrow A) | When doing this, the rear center console (1) is unclipped from the front stowage compartment (2). | |
| 7 | Remove rear center console (1) from transmission tunnel and turn to side until the connector package (arrow B) is accessible | | |
| 8 | Pull connector package (arrow B) out of rear center console (1) and disconnect electrical connectors (7) | Number of electrical connectors (7) according to equipment. | |
| 9 | Remove rear center console (1) | | |
| 10 | Install in the reverse order | | |