



P91.12-2749-08

1 Rear seat backrest
2 Nut

3 Screw

4 Bow

☒ ☒	Remove/Install		
1	Fold down the rear head restraints	<p>i See Operating Instructions</p>	
2	Remove rear seat cushion		AR91.12-P-1020TX
3	Remove the left and right nuts (2)		
4	Unscrew bolt (3).	<p>i Cover the rear seat backrest (1) and rear center console with cloths in the area where the tool is used in order to prevent them becoming damaged and dirty.</p>	
5	Slide rear seat backrest (1) upward and remove out of the guides	<p>i Installation: Firmly press the rear seat backrest (1) backward and downward in the area near the wire retaining clips (4). Make sure the retaining clips (4) are seating correctly in the guides in the body. Lay the left and right seat belts over the rear seat backrest (1).</p>	
6	Remove rear seat backrest (1) to the side out of the vehicle	<p>⚠ Use care when removing the rear seat backrest (1) from the vehicle; otherwise, the rear door and the door sill may be damaged.</p>	
7	Install in the reverse order		