
AR88.80-P-6000TX		Remove/install longitudinal member paneling	29.7.04
MODEL	219.3		

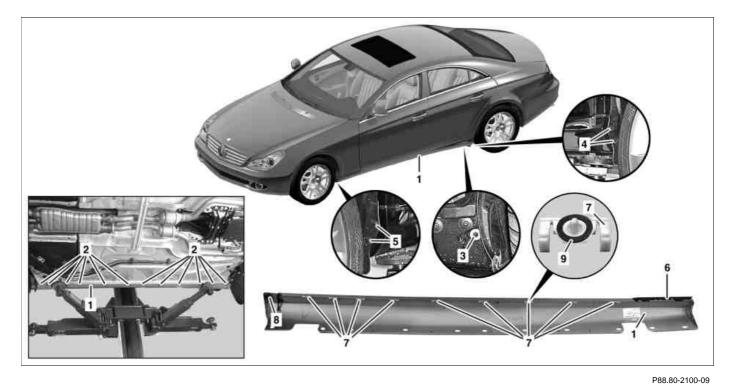

- Longitudinal member paneling Expansion clip 1
- 2
- 3 Screw

- Expansion clip Expansion clip 4
- 5
- 6 Seal

- 7 Clip 8 Seal
- 9 Gasket

XX	Remove/Install		
1	Remove expansion clips (2)	i Installation: Replace damaged expansion clips (2).	
2	Unscrew bolt (3) from rear fender liner		
3	Remove expansion clips (4) form rear fender liner	i Installation: Replace damaged expansion clips (4).	
4	Remove expansion clips (5) from front fender liner	i Installation: Replace damaged expansion clips (5).	
5	Open front and rear doors		
6	Unclip longitudinal member paneling (1) from longitudinal member with mounting wedge	Image: State of the state	*110589035900
		on longitudinal member paneling (1) Ensure that longitudinal member paneling (1) is seated correctly on all mounting points on longitudinal member	
7.1	Transfer seal (6, 8)	Only when replacing longitudinal member paneling (1).	
8	Install in the reverse order		

