



P68.10-3272-09

- 1 Trim strip
- 2 Right air nozzle
- 3 Center air nozzle
- 4 Instrument cluster covering
- 5 Bolts

- 6 Bolts
- 7 Bolt
- N22 AAC control and operating unit (without code (581) Comfort automatic air conditioning)

- N22/7 Comfort AAC control and operating unit (with code (581) Comfort automatic air conditioning)

**Modification notes**

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	<b>Remove/install</b>		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove right air nozzle (2)		AR68.10-P-1100TX
2	Remove center air outlet (3)		AR68.10-P-1150TX
3	Remove instrument cluster cover (4)		AR68.10-P-1550TX
4	Open glove compartment.		
5	Remove bolts (5)		
6	Unscrew bolts (6) with battery-powered screwdriver	Cordless drill/driver	*WH58.30-Z-1007-20A
7	Loosen bolt (7)		
8	Remove trim strip (1) until electrical connectors on AAC control and operating unit (N22) or comfort AAC AAC control and operating unit (N22/7) are accessible.	<ul style="list-style-type: none"> <li> Cover steering column module paneling to prevent damaging trim strip (1) or steering column mode paneling.</li> <li> Observe reset button of instrument panel.</li> </ul>	
9	Disconnect electrical connectors from AAC control and operating unit (N22) or comfort AAC AAC control and operating unit (N22/7)		
10	Remove trim strip (1) together with AAC control and operating unit (N22) or comfort AAC AAC control and operating unit (N22/7)		
11.1	Remove AAC control and operating unit (N22) or comfort AAC control and operating unit (N22/7) from trim strip (1).	<p>Only when replacing trim strip (1)..</p> <ul style="list-style-type: none"> <li> Lay trim strip (1) with front side down on suitable subsurface to prevent damaging trim strip (1).</li> <li> See: ↓</li> </ul>	AR68.10-P-0950TX

**Commercially available tools**

Number	Designation
WH58.30-Z-1007-20A	Cordless drill/driver