
 
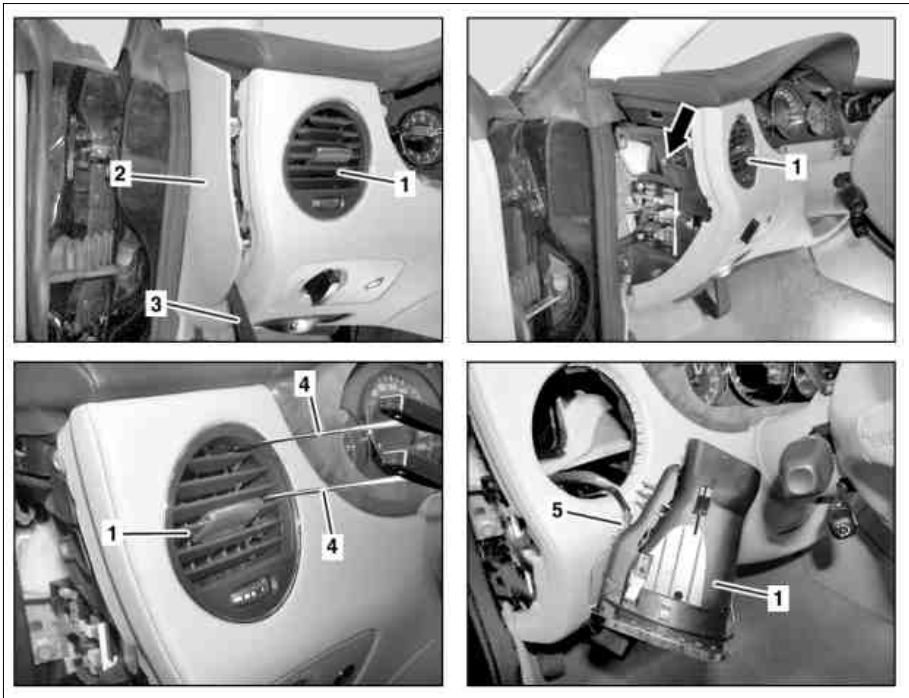










Shown on left door air outlet

 - 1 Air outlet
- 2 Cover
- 3  Mounting wedge
- 4  Pulling hook
- 5 Electrical connector




P68.10-3285-06

 	Remove/Install		
1	Unclip cover (2) from instrument panel (2) with mounting wedge (3)		<a href="#">*110589035900</a>
2	Pull air outlet (1) out with pulling hook (4)	<div> Do not damage guide (arrow) on air outlet (1).</div> <div></div> <div> <b>Installation:</b> Ensure that air outlet (1) arrests properly</div>	<a href="#">*140589023300</a>
3	Remove air outlet (1) from instrument panel until electrical connector (5) is accessible	 <b>Installation:</b> Guide (arrow) on air outlet (1) should engage in instrument panel	
4	Disconnect electrical connector (5) from air outlet illumination		
5	Remove air outlet (1)		
6	Install in the reverse order		

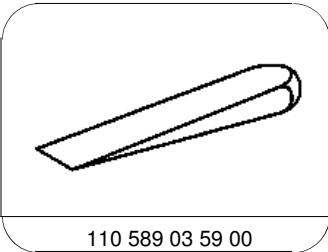

110 589 03 59 00

Mounting wedge

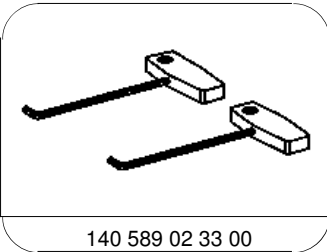

140 589 02 33 00

Pulling hook