



P82.10-3854-08

1 Screw

2 Electrical connector

E5/1 Left front fog lamp
E5/2 Right front fog lamp

☒ ☒	Remove/Install		
1	Remove bottom engine compartment paneling at front		AR61.20-P-1105TX
2	Separate electrical connector (2)		
3	Remove screws (1) and take out left front fog lamp (E5/1) or right front fog lamp (E5/2) out of the bumper		
4	Install in the reverse order		
5	Check adjustment of left front fog lamp (E5/1) and right front fog lamp (E5/2), adjust if necessary		
AP	Check and correct headlamp adjustment		AP82.10-P-8260TX