






P68.10-3270-09

- 1 Cover
- 2 Bolts
- 3 Clip
- 4 Bolt

- 5 Hood release
- 6 Release cable
- 7 Air duct

- E17/16 Left front footwell lamp
- N93 Central gateway control unit
- X11/4 Data link connector

 	Remove/Install		
1	Move driver's seat all the way down		See Operating Instructions
2	Switch off vehicle interior lighting		See Operating Instructions
3	Unscrew bolt (4)		
4	Pull hood release (5) out of the cover (1), detach release cable (6) and remove hood release (5).		
5	Unscrew bolts (2)		
6	Unclip clip (3) from cover (1)		
7	Fold cover (1) downward		Installation: Ensure that air duct (7) is connected correctly to AC housing.
8	Slide lock on data link connector (X11/4) in direction of arrow and remove data link connector (X11/4) from cover (1)		
9	Unclip central gateway control unit (N93) from cover (1) and lay down to side with lead connected		
10	Unclip left front footwell lamp (E17/16) from cover (1) and lay down to side with lead connected		
11	Remove cover (1) out of the footwell		
12	Install in the reverse order		