


## MODEL 219.3

- 1 Head restraints
- 2 Surrounds
- 3 Rear shelf paneling
- 4 Release lever
- 5 Head restraint mechanism
- 6 Punch, Ø 8 mm

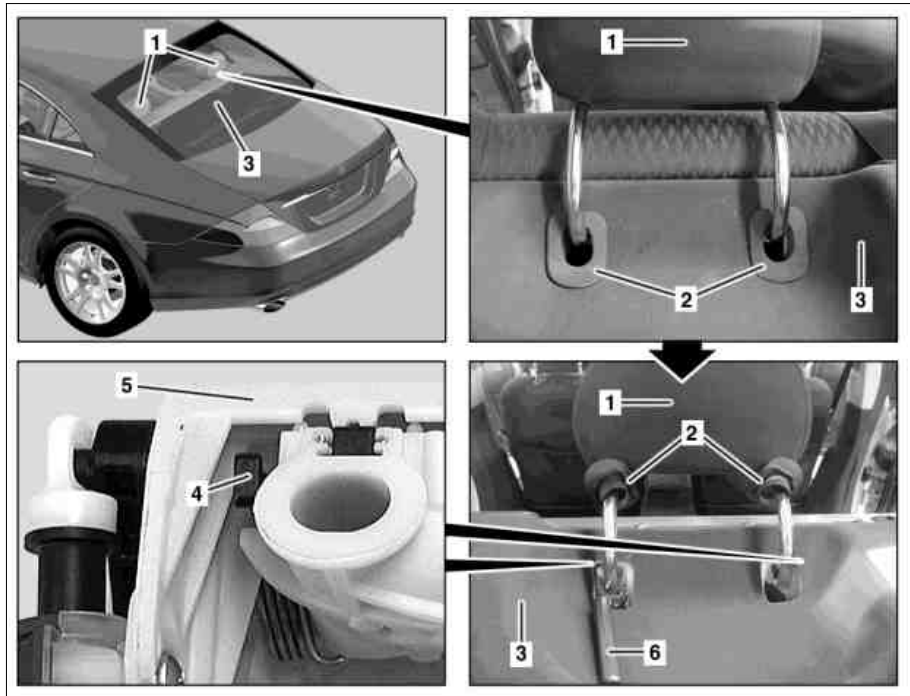

P91.16-2279-06

☒	<b>Remove</b>		
1	Move left or right head restraint into upright position (1) by hand		
2	Unclip trim pieces (2) from the rear shelf (3)	<b>i</b> Note correct installation positions.	
3	Operate the left and right release levers (4) with an Ø 8 mm punch (6)		
4	Pull head restraint (1) out of head restraint mechanism (5)		
☒	<b>Install</b>		
5	Guide head restraint (1) into head restraint mechanism (5) until the head restraint (1) locks		
6	Install covers (2)	<b>i</b> Note correct installation positions.	
7	Perform head restraint folding function check	<b>i</b> See Operating Instructions	