

P82.10-3876-09

Illustrated with Code (489) Airmatic (semi-active air suspension) and Code (433) Left dynamic seat, incl. multicontour seat

- 1 Spreading clip
- 2 Left trunk paneling
- 3 Right trunk paneling
- 4 Hinge lever opening frame
- 5 Luggage net
- 6 Air reservoir (for Code (489) Airmatic (semi-active air suspension))


- 7 Nut
- 8 Electrical connector

- E3 Left taillamp
- E4 Right taillamp

- M40 Multicontour seat pneumatic pump (with Code (433) Left dynamic seat, incl. multicontour seat or Code (434) Right dynamic seat, incl. multicontour seat)

- 9 Nut
- 10 Electrical connector

- E3 Left taillamp

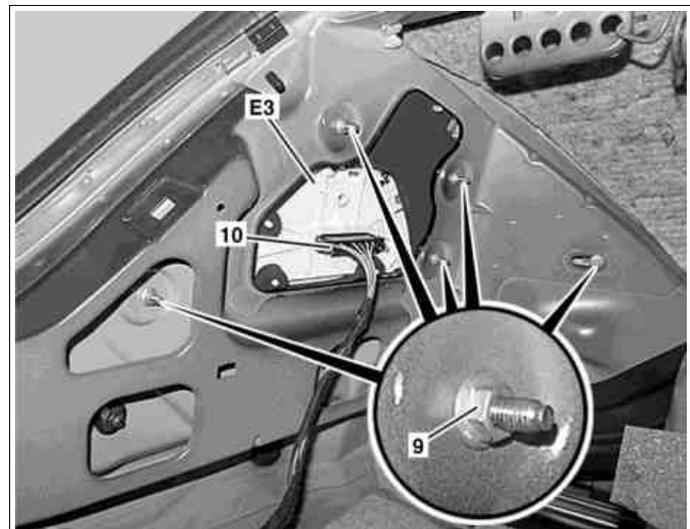

P82.10-3877-11

	Remove/Install	
1	Remove trim from rear end center assembly	AR68.30-P-4785TX
2	Remove expanding clip (1) from the left trunk lining (2) or right trunk lining (3)	
3	Unclip hinge lever opening frame (4) from the left trunk lining (2) or right trunk lining (3) and remove	
4.1	Detach luggage net (5) from right trunk lining	When removing right taillamp (E4)

5.1	Detach air reservoir (6) and lay to the side as far as possible until all nuts (7) are accessible	When removing the right taillamp (E4) on vehicles with Code (489) Airmatic (semi-active air suspension)  Air reservoir (6) is bolted using three screws.	
6.1	Unscrew nuts (7), unplug electrical connector (8) and remove right taillamp (E4)	When removing right taillamp (E4).	
7.1	Press multicontour seat pneumatic pump (M40) aside until all nuts (9) are accessible	When removing left taillamp (E3) on vehicles with Code (433) Left dynamic seat, incl. multicontour seat or Code (434) Right dynamic seat, incl. multicontour seat	
8.1	Unscrew nuts (9), unplug electrical connector (10) and remove left taillamp (E3)	When removing left taillamp (E3).	
9	Install in the reverse order		