
AR72.29-P-1000TX Re		Remove/install front door control unit	
MODE	EL 219.3		
1	Retaining clamp		
2	Supports		1 (0)
N69/1	Door control unit from	left	
N69/2	Door control unit from	right	
			The T
			2.
			20

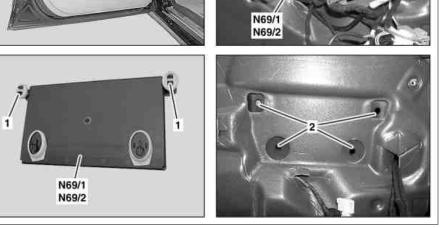

P72.29-2335-06

## Modification notes

6.6.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

XX	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1.1	Buffer basic data of left front door control unit (N69/1) or right front door control unit (N69/2) in STAR DIAGNOSIS	When replacing left front door control unit (N69/1) or right front door control unit (N69/2).	
		i Installation: Transfer buffered basic data from STAR DIAGNOSIS to new left front door control unit (N69/1) or new right front door control unit (N69/2)	
<b>₩</b> AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
		STAR DIAGNOSIS diagnosis system	*WH58.30-Z-1048-13A
2	Remove front door lining		AR72.10-P-1000TX
3	Disconnect all electrical connectors from left front door control unit (N69/1) or right front door control unit (N69/2)	<b>i</b> Installation: Ensure that electrical lines are routed correctly	
4	Press retaining clips (1) together at side of left front door control unit (N69/1) or right front door control unit (N69/2) with suitable pliers and remove left front door control unit (N69/1) or right front door control unit (N69/2) from mounts (2) in inner door panel	<b>i</b> Installation: Ensure that left front door control unit (N69/1) or right front door control unit (N69/2) is seated correctly in mounts (2)	
5	Install in the reverse order		

## Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00