



P72.10-3007-09

1 Lock cylinder
2 Door sealing frame

3 Access cover
4 Door handle

5 Electrical connector
6 Cover

| ☒ ☒ | Removal/installation | | |
|-----|--|---|---------------------|
| 1 | Loosen door sealing frame (2) from front door in area of access cover (3) | i Installation: Ensure that door sealing frames (2) is seated correctly in area of access cover (3). | |
| 2 | Unscrew concealed screw (arrow) until lock cylinder (1) can be moved freely | Nm | *BA72.10-P-1006-01M |
| 3 | Lift door handle (4) and pull lock cylinder (1) out of front door until electrical connector (5) is accessible | i Installation: Observe installation position of lock cylinder (1) in front door lock. | |
| 4 | Disconnect electrical connector (5) and remove lock cylinder (1) | | |
| 5.1 | Unlock latching hook on rear of cover (6) with suitable screwdriver and remove cover (6) from lock cylinder (1). | When replacing lock cylinder (1). i Installation: Ensure that cover (6) is seated correctly on lock cylinder (1) | |
| 6 | Install in the reverse order | | |
| 7 | Check lock system for proper function | | |

Nm Front door

| Number | Designation | Model 219.3 |
|--------------------|--|----------------|
| BA72.10-P-1006-01M | Screw, lock cylinder guide to front door | Nm 3 |