



P80.61-2142-09

- | | | | | | |
|-------|--|-------|---|--------|-------------------------------------|
| A1 | Instrument cluster | N15/5 | Electronic selector lever module control unit | S2/3 | Keyless go start/stop pushbutton |
| A2/31 | Rear bumper antenna | N26/5 | Electric steering lock control unit | S17/3 | Left front door contact switch |
| A2/35 | Keyless go antenna, trunk | N69/8 | Left rear door keyless go control unit | S17/4 | Right front door contact switch |
| A2/65 | Right antenna amplifier module | N69/9 | Right rear door keyless go control unit | S17/5 | Left rear door contact switch |
| A8/1 | Transmitter key | N73 | EIS [EZS] control unit | S17/6 | Right rear door contact switch |
| M14/7 | Trunk lid CL [ZV] motor | N93 | Central gateway control unit | S17/19 | Left door handle switch |
| M57 | Left front opening assist motor | N102 | Rear module Keyless Go control unit | S17/20 | Left rear door handle switch |
| M57/1 | Right front opening assist motor | N103 | Interior module Keyless Go control unit | S17/21 | Right door handle switch |
| M57/2 | Left rear opening assist motor | | | S17/22 | Right rear door handle switch |
| M57/3 | Right rear opening assist motor | | | S62/21 | Trunk lid keyless go pushbutton |
| N10/2 | Rear SAM control unit with fuse and relay module | | | S88/4 | Lock pawl rotary tumbler switch |
| | | | | S88/8 | Trunk lid external operation switch |