

System

System settings

Calling up the System menu

- ▶ Press **SERV**.

The System menu appears.



- Tones soft key
For switching confirmation beeps and acoustic signals ON and OFF (▷ page 167).
- Display soft key
For changing the display settings (▷ page 167).
- VC tips soft key
To call up the Voice control settings* (▷ page 168).
- Reset soft key
For reversing **COMAND** to the factory settings (▷ page 171).

Selectable soft keys

- Time soft key
For setting the date and time.
- Lang. soft key
For setting the language (▷ page 166).

Setting the date/time

- ▶ In the System menu, press the **Time** soft key.

The Date/Time settings menu appears.



The following options are now available:

- Setting the time
- Setting the date
- Setting the date/time format

Setting the time

The UTC time transmitted by the GPS satellites has to be set to the local time zone. This enhances

- correct navigation for routes with time-dependent traffic guidance, and
- correct calculation of the estimated time of arrival.



There is no automatic change from daylight saving time to standard time. This has to be changed manually.

When you change the time zone, the clock time also changes automatically. If you enter an incorrect time, the time difference remains unchanged when you change time zone.

- ▲ Use **◀** or **▶** to select the hours or the minutes.

Setting the date



The date can be set only if GPS reception is available.

- ▲ Use **◀** or **▶** to select the day, the month or the year.
- ▲ Press **▲** or **▼**.

Depending on the selection, the day, the month, or the year is set.

- ▲ Press the **Back** soft key.

The new setting is stored.

Setting the date/Time format

- ▲ Press the **Format** soft key.

You will see the date and time following the currently selected format, as well as a list of possible formats.



System

System settings



List entry 1-3: Date formats

List entry 4 and 5: Time formats

(Entry 5 is not visible on the display example below.)

Solid circle : format set

Empty circle : format not set



Setting the format:

- ▶ Use or to select a format.
- ▶ Press .
- ▶ The appropriate format is selected.
- ▶ Press the Back soft key or wait for the screen to change.
- ▶ The new setting is stored.

Setting the language

The language setting changes the display language as well as the language used for voice instructions in navigation announcements.

- ▶ In the System menu () , press the Lang . soft key.

The language list is displayed.

The following options are available:

- Instr. cluster settings:
The system switches to the language already set in the vehicle instrument cluster (Vehicle Operator's manual).
- All other options:
The system switches to the requested language.

