


Engine 156 in model 211


Engine 272, 273 in model 211, 219

- 1 Coolant hose
 2 Cap
 3 Expansion reservoir
 4 Coolant line
 4a Lock
 4b O-ring
 5 Expansion rivet
 S41 Coolant level indicator switch

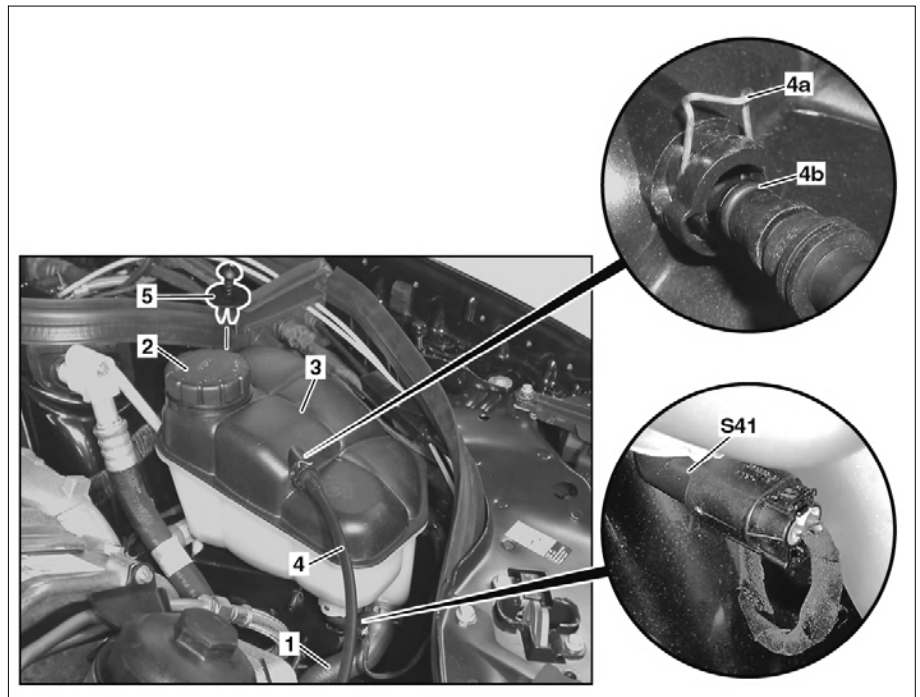

P20.30-2173-06

☒ ☒	Remove/install		
⚠ Warning	Risk of injury to skin and eyes suffering scalding from contact with hot coolantspray. Risk of poisoning from swallowing coolant.	Do not open cooling system unless coolant temperature is below 90 °C. Open cap slowly and release the pressure. Do not pour coolant into beverage containers. Wear protective gloves, protective clothing and safety glasses.	AS20.00-Z-0001-01A
⚠ Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof. 1 Open hood	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A AR88.40-P-1000T
2	Clamp off coolant hose (1)		
3	Separate electrical connection from coolant level indicator switch (S41)		
4	Unscrew cap (2) and suction off coolant out of the expansion reservoir (3)	☑ Hand pump	*210589007100
5	Lift lock (4a) and pull coolant line (4) out of the expansion reservoir (3)	i Installation: Replace O-ring (4b).	
6	Detach coolant hose (1) from expansion reservoir (3)		
7	Remove expansion rivet (5)		
8	Remove expansion reservoir (3) upward		
9	Install in the reverse order		
☐	Check		
10	Check coolant level and correct if necessary Notes on coolant level		AH20.00-P-1142-01CW
11	Check cooling system for leaktightness	Inspect cooling system for leaks Engine 272, 273 Inspect cooling system for leaks Engine 156	AR20.00-P-1010TS AR20.00-P-1010TMG
⚠ Warning	Risk of accident from vehicle starting off by itself when engine running. Risk of injury (bruises and burns) resulting from working on the engine while it is being started or when it is running.	Secure vehicle to prevent it from starting off by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
12	Carry out an engine test run		

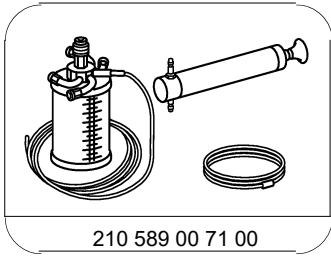

210 589 00 71 00

Hand pump