

P54.25-4329-07

- 1 Instrument panel bottom section on driver's side
- 2 Left cover


- 3 Bolt
- 4 Locking clips

S1 Rotary light switch

Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Unclip left cover (2) from instrument panel with mounting wedge		*110589035900
2	Unscrew bolt (3).		
3	Remove bottom section of instrument panel (1) on driver's side		AR68.10-P-1505TX
4	Press locking clips (4) of rotary light switch (S1) and remove rotary light switch (S1) from instrument panel bottom section on driver's side (1)		
5	Install in the reverse order		
6	Carry out function check of rotary light switch (S1)		

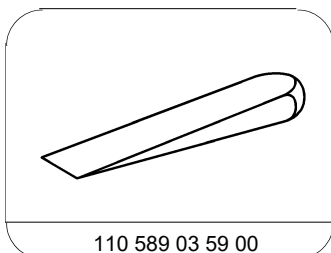

Wedge tool