

P91.10-2804-09

Shown on right front seat (1) with code (242) Electrically adjustable front passenger seat with memory

- | | | | | | |
|---|--|----|--|-------|--|
| 1 | Front seat | 7 | Cover for belt end fitting | N32/1 | Driver front seat adjustment control unit with memory (with code (275) Memory package (driver seat, steering column, mirrors)) |
| 2 | Screw | 8 | Screw | N32/2 | Passenger-side front seat adjustment control unit with memory (with code (242) Electrically adjustable front passenger seat with memory) |
| 3 | Bolts | 9 | Electrical connector (with code (873) Heated left and right front seats) | | |
| 4 | Electrical connector | 10 | Retaining rails | | |
| 5 | Electrical connector (with code (275) Memory package (driver seat, steering column, mirrors) or code (242) Electrically adjustable front passenger seat with memory) | 11 | Pneumatic line (with code (404) Left multicontour seat or code (405) Right multicontour seat or code (433) Left dynamic seat, incl. multicontour seat or code (434) Right dynamic seat, incl. multicontour seat) | | |
| 6 | Electrical connector (with code (275) Memory package (driver seat, steering column, mirrors) or code (242) Electrically adjustable front passenger seat with memory) | | | | |

Modification notes

| | | | |
|---------|---|--|--|
| 30.6.08 | Head restraint removal no longer applicable | | |
|---------|---|--|--|

| | Remove/install | | |
|--|----------------|--|---|
| | Danger! | Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units. | Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply. |
| | | Notes on performing repair, body work and welding on vehicles with airbags or emergency tensioning retractor units | AS91.00-Z-0001-01A |
| | | Information on preventing damage to electronic components due to electrostatic discharge | AH91.00-P-0002-01M |
| | | Assessment of airbag and emergency tensioning retractor units in accident vehicles | AH54.00-P-0001-01A |
| | | Legal requirements on handling and storing airbags and emergency tensioning retractor units | AH91.00-P-0006-01B |
| | 1 | Move front seat (1) forward and up | AH91.00-P-0004-01A |
| | 2 | Set front seat backrest upright | |


| | | | |
|----|---|--|---------------------|
| | | | *BA91.10-P-1001-01M |
| 4 | Unclip belt end fitting cover (7) | | *110589035900 |
| 5 | Remove the screw (8) and remove belt end fitting | | *BA91.40-P-1001-01M |
| 6 | Position front seat (1) to rear | | |
| 7 | Remove bolts (2) | Installation: Replace bolts (2). | *BA91.10-P-1001-01M |
| 8 | Move front seat backrest back slightly | | |
| 9 | Switch off the ignition and remove the transmitter key from the EIS control unit | On vehicles with code (889) Keyless-Go, press the Keyless-Go start and stop button repeatedly until the ignition is switched off. Remove the transmitter key from the vehicle and store it at a location beyond its transmission range (at least 2 m). | |
| 10 | Raise front seat (1) at front | | |
| 11 | Disconnect electrical connector (4) | | |
| 12 | Disconnect electrical connector (9) | On vehicles with code (873) Heater right and left front seats | |
| 13 | Disconnect electrical connector (5) and electrical connector (6) from the driver-side front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2) | On vehicles with code (275) Memory package (driver seat, steering column, mirrors) or with code (242) Electrically adjustable front passenger seat with memory | |
| 14 | Release driver-side front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2) out of the retaining rails (10) and remove | On vehicles with code (275) Memory package (driver seat, steering column, mirrors) or with code (242) Electrically adjustable front passenger seat with memory | |
| 15 | Detach pneumatic line (11) | On vehicles with code (404) Left multicontour seat or with code (405) Right multicontour seat or with code (433) Left dynamic seat, incl. multicontour seat or with code (434) Right dynamic seat, incl. multicontour seat | |
| 16 | Attach protective cover to rear bench seat and center console | | |
| 17 | Lift front seat (1) to the rear and out of the vehicle's rear door | Aid of helper required. | |
| 18 | Install in the reverse order | | |
| 19 | Normalize front seat (1) using STAR DIAGNOSIS | On vehicles with code (433) Left dynamic seat, incl. multicontour seat or with code (434) Right dynamic seat, incl. multicontour seat | |
| | Connect STAR DIAGNOSIS and read out fault memory | | AD00.00-P-2000-04A |
| 20 | Perform initial startup of weight sensors | After installing the front passenger seat on vehicles with code (494) USA version. Menu item "Initial startup of weight sensors". | *211589003200 |

Front seats

| Number | Designation | Model 219 |
|--------------------|-----------------------------|--------------|
| BA91.10-P-1001-01M | Front seat on vehicle floor | Nm 45 |


Seat belts/emergency tensioning retractors

| Number | Designation | Model 219 |
|--------------------|--|--------------|
| BA91.40-P-1001-01M | Bolt to belt end fitting of passenger seat | Nm 32 |

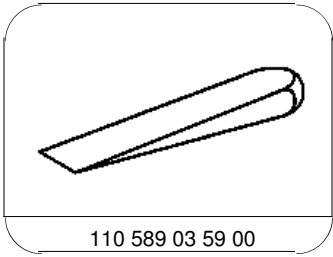

110 589 03 59 00

Mounting wedge

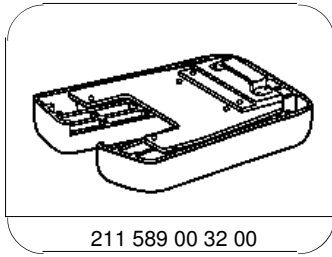

211 589 00 32 00

Plates